


# SHARP SERVICE MANUAL

CODE: 00ZMXCFX1/S1E

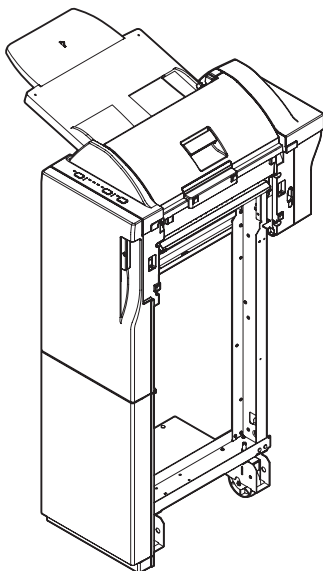

## DIGITAL FULL COLOR MULTIFUNCTIONAL SYSTEM OPTION INSERTER

**MODEL MX-CFX1**

### CONTENTS

[1] PRODUCT OUTLINE.....	1-1
[2] SPECIFICATIONS .....	2-1
[3] UNPACKING AND INSTALLATION	
*For unpacking and installation, refer to the installation manual( [5] ).	
[4] EXTERNAL VIEWS AND INTERNAL STRUCTURES .....	4-1
[5] OPERATIONAL DESCRIPTION .....	5-1
[6] DISASSEMBLY AND ASSEMBLY .....	6-1
[7] MAINTENANCE.....	7-1
[8] ADJUSTMENTS .....	8-1
[9] SIMULATION .....	9-1
[10] SELF DIAG MESSAGE AND TROUBLE CODE .....	10-1
[11] ELECTRICAL SECTION .....	11-1

Parts marked with "△" are important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

# CONTENTS

## **[1] PRODUCT OUTLINE. .... 1-1**

### **[2] SPECIFICATIONS**

1. Basic specifications ..... 2-1

### **[3] UNPACKING AND INSTALLATION**

\*Forw unpacking and installation, refer to the installation manual( [5] ).

### **[4] EXTERNAL VIEWS AND INTERNAL STRUCTURES**

1. External components ..... 4-1
2. Sensors and switches..... 4-1
3. Motors, solenoid, and clutch..... 4-2

### **[5] OPERATIONAL DESCRIPTION**

1. Structure ..... 5-1
2. Function outline ..... 5-1
3. Operational description..... 5-1
4. Offline mode setting ..... 5-4
5. LED indication on operator panel ..... 5-6
6. Paper jam/error detection ..... 5-7

## **[6] DISASSEMBLY AND ASSEMBLY**

1. Paper feed separation unit ..... 6-1
2. Paper feed unit ..... 6-2
3. Drive unit..... 6-4
4. PWB ..... 6-4
5. Motor..... 6-4
6. Other parts ..... 6-5
7. Note on assembly ..... 6-7

## **[7] MAINTENANCE**

1. Maintenance list ..... 7-1

## **[8] ADJUSTMENTS**

1. Paper width detection level setting (adjustment) 8-1

## **[9] SIMULATION**

1. List ..... 9-1
2. Details of trouble code ..... 9-1



## **[10] SELF DIAG MESSAGE AND TROUBLE CODE 10-1**

## **[11] ELECTRICAL SECTION**

1. Actual wiring chart .....11-1
2. Circuit description .....11-3

## [1] PRODUCT OUTLINE

This inserter is an optional unit for the MX-5500N/MX-6200N/MX-7000N series of digital complex machines. With the inserter installed, blank sheets or printed sheets can be inserted as covers (made of cardboard) or tabbed sheets without being subject to the printing process (and without passing through a fixing unit). When the inserter is combined with a finisher (optional) and a punch unit (optional), printed sheets can proceed to the hole punching or stapling process without being subject to the copying process (or without passing through the main unit).

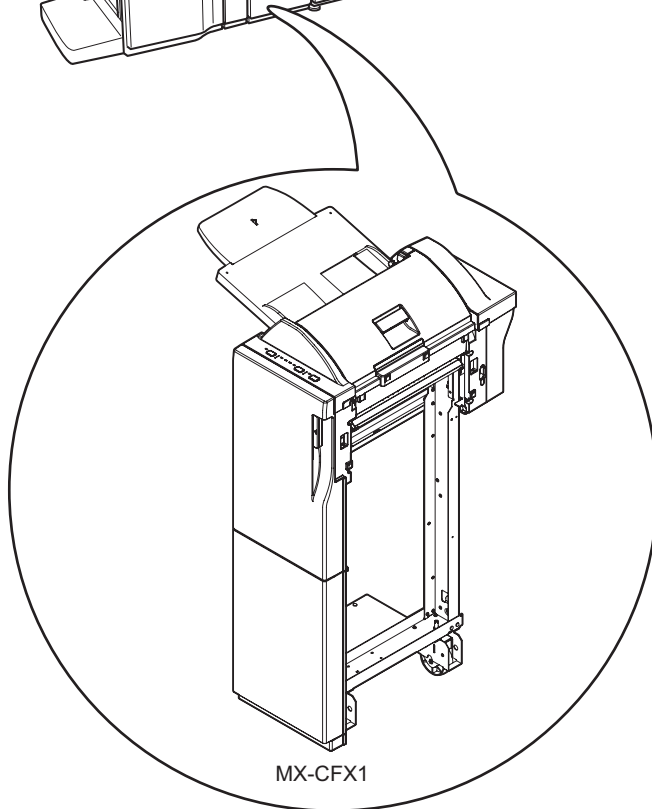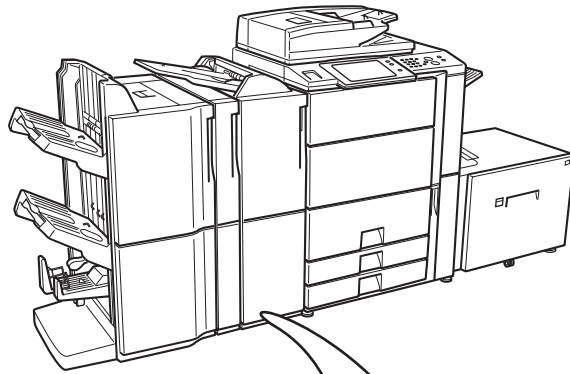

## [2] SPECIFICATIONS

### 1. Basic specifications

Name	Inserter	
Type	Floor standing	
Transport reference	Center reference	
Productivity	Single-sided: 36 cpm, double-sided: 25 cpm (when A4 size 8.5x11 paper is fed continuously)	
Loading capacity	100 sheets max. (standard paper: 80g/m <sup>2</sup> )	
Paper size/weight	Refer to Table 1 ("Paper size/weight")	
Offline function	Mode	Stapling, saddle stitch, punching
	Paper size/weight	As for the paper size/weight in each mode, rules for each mode shown in "Exit paper size/weight (finisher)" should be observed.
Reliability	MCBJ: Conforms to the main unit MCBF: Conforms to the main unit	
Life	Conforms to the main unit	
Power supply	Supplied from the finisher	
External dimensions (WxDxHmm)	455x595x1050mm, 17 59/64x23 27/64x41 21/64 inch	
Product dimensions (WxDmm)	565x595mm, 22 1/4x23 27/64 inch	
Weight	Approx. 23kg, 50.7lbs	

Table 1: Paper size/weight

			Capacity of paper that can be exited	Offset	Capacity of paper that can be stapled	Saddle stitch	Punching, 2-holes	Punching, 3-holes	Punching, 4-holes	Punching, 4-holes, wide	Inserter paper feed
Paper size	A3W		Yes	No	No	No	No	No	No	No	Yes
	A3		Yes	Yes	30	Yes	Yes	Yes	Yes	Yes	Yes
	B4		Yes	Yes	30	Yes	Yes	No	No	Yes	Yes
	A4		Yes	Yes	50	No	Yes	Yes	Yes	Yes	Yes
	A4R		Yes	Yes	30	Yes	Yes	No	No	Yes	Yes
	B5		Yes	Yes	50	No	Yes	No	No	Yes	Yes
	B5R		Yes	No	No	No	Yes	No	No	Yes	Yes
	A5R		Yes	No	No	No	No	No	No	No	Yes
	12x18		Yes	No	No	No	No	No	No	No	Yes
	11x17		Yes	Yes	30	Yes	Yes	Yes	Yes	Yes	Yes
	8.5x14		Yes	Yes	30	Yes	Yes	Yes*3	No	Yes	Yes
	8.5x13		Yes	Yes	30	No	Yes	Yes*3	No	Yes	Yes
	8.5x11		Yes	Yes	50	No	Yes	Yes	Yes	Yes	Yes
	8.5x11R		Yes	Yes	30	Yes	Yes	Yes*3	No	Yes	Yes
	7.25x10.5R		Yes	No	No	No	Yes	No	No	Yes	Yes
	5.5x8.5R		Yes	No	No	No	No	No	No	No	Yes
	8K		Yes	Yes	30	Yes	Yes	No	No	No	Yes
	16K		Yes	Yes	50	No	Yes	No	No	No	Yes
	16KR		Yes	No	No	No	Yes	No	No	No	Yes
	Postcard		Yes	No	No	No	No	No	No	No	No
	Envelope		Yes	No	No	No	No	No	No	No	No
	Special		Yes	No	No	No	No	No	No	No	No
Type and weight of paper that can be fed	Thin paper	55-59g/m <sup>2</sup> 15-16- lbs bond	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
	Normal paper	60-105g/m <sup>2</sup> 16-28 lbs bond	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
	cardboard 1 (including gloss paper)	106-209g/m <sup>2</sup> 28+-56- lbsbond	Yes	Yes	*1	*2	Yes	Yes	Yes	Yes	Yes
	cardboard 2	210-256g/m <sup>2</sup> 56-68 lbs bond	Yes	Yes	*1	*2	Yes	Yes	Yes	Yes	Yes
	Envelope	75-90g/m <sup>2</sup> 20-24 lbs bond	Yes	No	No	No	No	No	No	No	No
	OHP		Yes	No	No	No	No	No	No	No	Yes
	Label paper		Yes	No	No	No	No	No	No	No	No
	Tab paper		Yes	No	No*4	No	Yes*5	Yes*5	Yes*5	Yes*5	Yes

\*1) Stapling of 256g/m<sup>2</sup> paper 2 sheets + 80g/m<sup>2</sup> paper 48 sheets is enabled (cardboard is included).

\*2) Saddle stitch of 256g/m<sup>2</sup> paper 1 sheet + 80g/m<sup>2</sup> paper 14 sheets is enabled (cardboard is included).


\*3) Punching 3-holes is automatically changed to 2-holes.

\*4) While paper is fed from the inserter, stapling is enabled.

\*5) While paper is fed from the inserter, punch operation is enabled.


## [4] EXTERNAL VIEWS AND INTERNAL STRUCTURES

### 1. External components

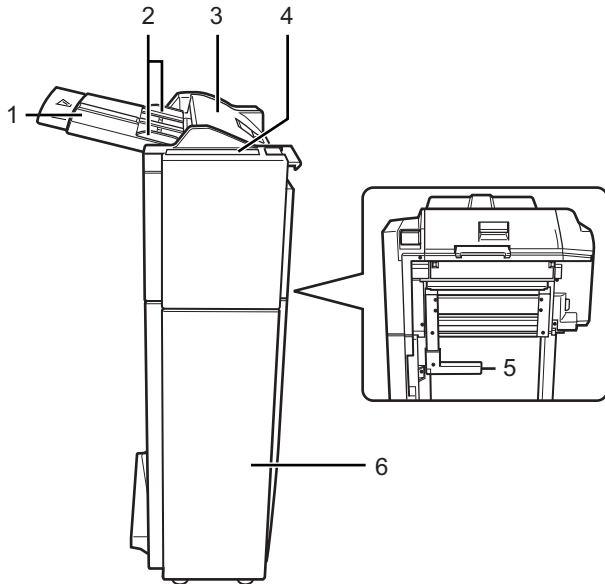

No.	Description	Function
1	Paper feed tray	Place blank or printed sheets to be inserted in this tray.
2	Paper guide	Adjust this guide according to the paper size.
3	Top cover	Open this cover to clear a paper jam.
4	Operator panel	Used to staple and punch during off-line. (The same operation can be made with the operation panel of the main unit.)
5	Paper guiding section (Lever)	Unlock the paper guiding section to clear a paper jam.
6	Front cover	Open this cover to remove jammed paper from the finisher or saddle finisher.


### 2. Sensors and switches

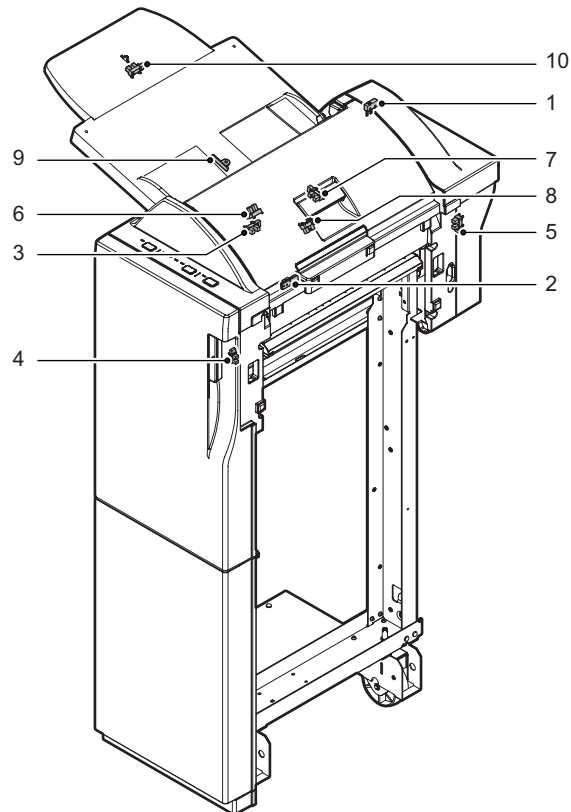

No.	Symbol	Description	Type	Function and operation	Output	Product name (Model)	Manufacturer
1	JCK_S W	JAM cover open/close switch	Microswitch	Detects that the JAM cover is opened or closed.	When the JAM cover is opened, TP37 turns HIGH.	DE2L-FAAA	HIROSE CHERRY PRECISION

2	H_SEN	Reverse sensor	Reflective sensor	Detects that a sheet to be inserted is transported to the reverse sensor.	When a sheet is detected, TP1 turns HIGH.	SENSOR (SNS - SPI-337-01)	SANYO
3	HI_SEN	Paper exit sensor	Photointerrupter	Detects that a sheet to be inserted is transported to the paper exit sensor.	When a sheet is detected, TP7 turns LOW.	TLP1241 (C5)	TOSHIBA
4	HYK_SEN	Reverse unit open/close sensor	Photointerrupter	Detects that the reverse unit is opened or closed.	When the reverse unit is opened, TP9 turns LOW.	TLP1241 (C5)	TOSHIBA
5	S_SEN	Set sensor	Photointerrupter	Detects that the inserter is joined to the main unit.	When the inserter is joined to the main unit, TP16 turns HIGH.	TLP1241 (C5)	TOSHIBA
6	EMP_SEN	Empty sensor	Photointerrupter	Detects presence/absence of a sheet to be inserted in the paper feed tray.	When a sheet is detected, TP4 turns HIGH.	TLP1241 (C5)	TOSHIBA
7	REG_SEN	Registration sensor	Photointerrupter	Detects that a sheet to be inserted is transported to the registration sensor.	When a sheet is detected, TP5 turns LOW.	TLP1241 (C5)	TOSHIBA
8	TIM_SEN	Timing sensor	Photointerrupter	Detects that a sheet to be inserted is transported to the timing sensor.	When a sheet is detected, TP6 turns LOW.	TLP1241(C5)	TOSHIBA
9	T_VR	Sheet width detection potentiometer	Potentiometer	Detects the width of a sheet to be inserted in the tray.	The voltage of TP12 varies between 0 V and 5 V depending on the sheet width.	RDC505003A	ALPS
10	T_SEN	Tray sensor	Photointerrupter	Detects the length of a sheet to be inserted in the tray	When a sheet is detected, TP13 turns LOW.	GP1A73A	SHARP

### 3. Motors, solenoid, and clutch

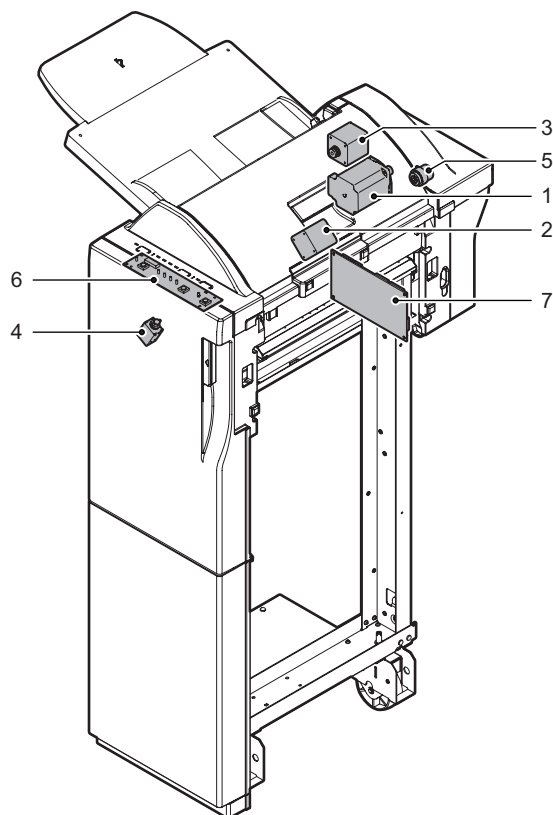


No.	Symbol	Description	Function	Product name (Model)	Manufacturer
1	K_MOT	Paper feed motor	Feeds a sheet to be inserted from the tray.	23KM-K112-P5V	MINEBEA
2	H_MOT	Reverse motor	Reverses and ejects a sheet to be inserted.	17PM-J507-P2VS	MINEBEA
3	Y_MOT	Horizontal transport motor	Transports a sheet to be inserted on the horizontal transport path.	17PM-J507-P3VS	MINEBEA
4	F_SOL	Flapper solenoid	Switches over the flapper in the reversing operation.	TDS-10SL-134	TDS
5	R_CL	Registration clutch	Holds the registration rollers to maintain registration.	BJ-2.6-184	SHINKO
6	PBA-PANEL	Operation panel PWB	-		
7	PBA-CONT	Main control PWB	-		

## [5] OPERATIONAL DESCRIPTION

### 1. Structure

#### A. Cross-sectional view (Main body)

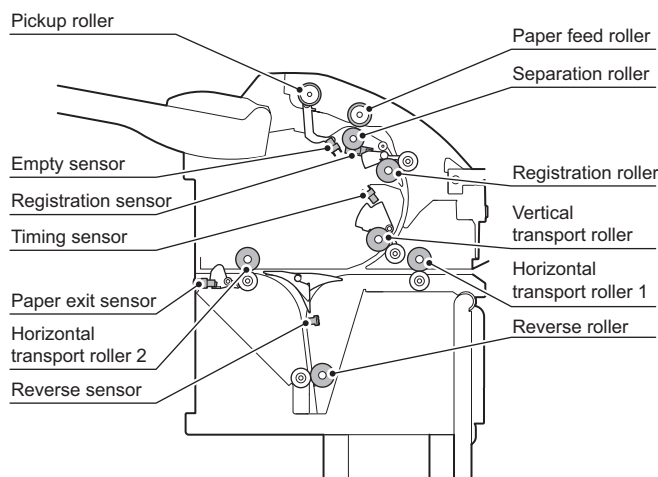

#### B. Drive system

[List of actuators]

Actuator		Components to be driven
Description	Type	
Paper feed motor	Pulse motor	Pickup roller, feed rollers, separation rollers, registration rollers, vertical transport rollers
Transport motor	Pulse motor	Inlet rollers (horizontal transport rollers 1), paper exit rollers (horizontal transport rollers 2)
Reverse motor	Pulse motor	Reverse rollers
Reverse flapper solenoid	Solenoid	Switch-over flapper in reverse section
Registration clutch	Electromagnetic clutch	Registration roller lock clutch

### 2. Function outline

#### A. Operation mode


- 1) Normal (online mode)
  - Through (horizontal transport)
  - Straight mode (normal paper feeding from inserter)
  - Reverse mode (reverse paper feeding from inserter)
- 2) Offline mode
  - Punching mode (inserter operation = normal paper feeding)
  - Stapling mode (inserter operation = normal paper feeding)

#### B. Delivery speed


- 1) Delivery speed
  - Straight mode: 627 mm/sec
  - Saddle mode (reverse): 276 mm/sec

### 3. Operational description


#### A. Through-mode operation of inserter (Online)

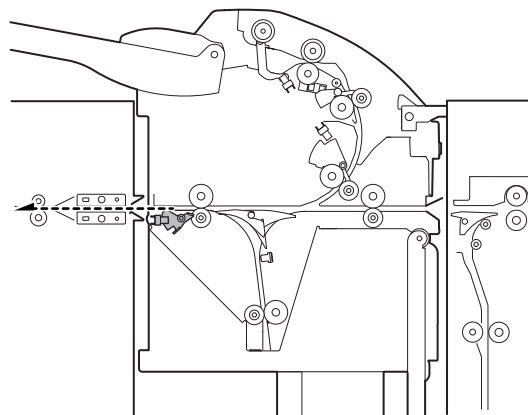

- 1) The inserter receives an operation command sent by the main unit.
- 2) The transport motor rotates at a speed specified by the main unit.  
Horizontal transport rollers 1 (inlet rollers) and horizontal transport rollers 2 (paper exit rollers) rotate.
- 3) A sheet exits from the main unit

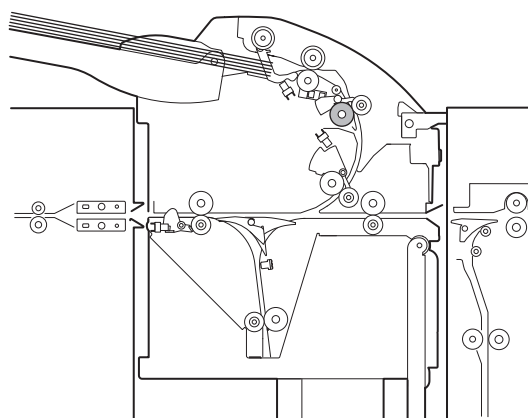


- 4) The paper exit sensor detects the leading edge of the sheet.

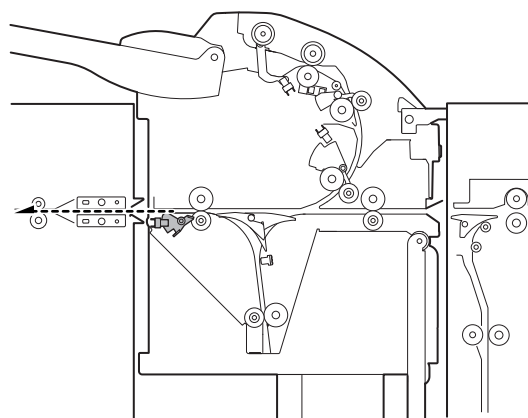

- 5) The paper exit sensor detects the trailing edge of the sheet.
- 6) The transport motor stops.  
Horizontal transport rollers 1 and horizontal transport rollers 2 stop.


## B. Normal paper feed operation of inserter (online/offline)

### [Paper loading]

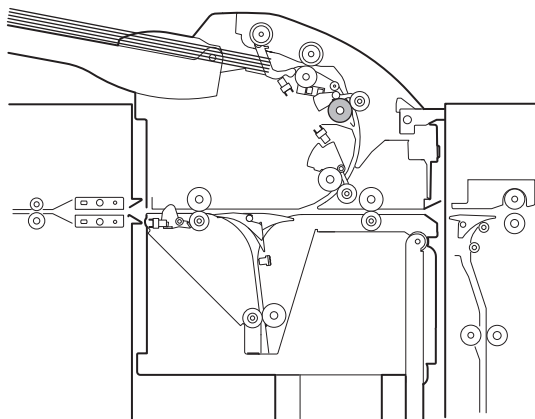


- 1) A sheet is placed in the paper feed tray of the inserter.
- 2) The START LED lights up in blue on the operator panel of the inserter.
- 3) An operation command is sent by the main unit, or a user presses the START switch on the operator panel of the inserter.
- 4) The registration clutch is turned ON to lock the registration rollers.

### [Separation]

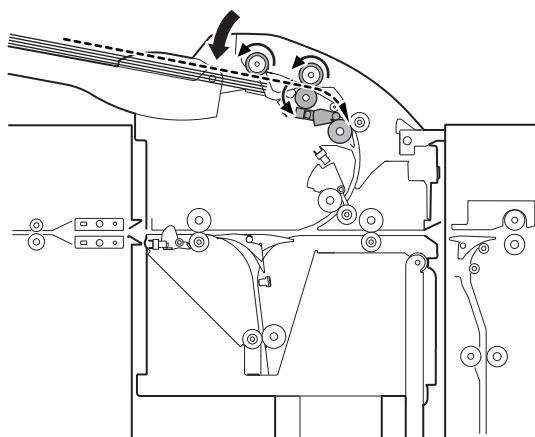

- 5) The paper feed motor reverses to lower the pickup roller, thereby taking in the sheet from the paper feed tray.
- 6) The registration sensor detects the leading edge of the sheet.
- 7) The sheet makes contact with the registration rollers to form a loop, thereby stopping the paper feed motor.
- 8) The registration clutch is turned OFF.

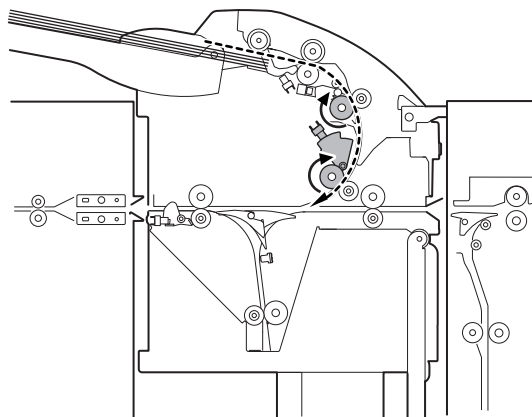


- 9) The paper feed motor starts to rotate in the forward direction. The registration rollers and vertical transport rollers rotate.
- 10) The timing sensor detects the leading edge of the sheet.
- 11) The leading edge of the sheet passes between the vertical transport rollers.
- 12) When sheet transport needs to be suspended for adjusting the space between sheets, the paper feed motor stops to stop the sheet.

### [Transport]

- 13) When a predetermined waiting time period has passed, The paper feed motor restarts.  
(If the transport motor has stopped, it is started.)
- 14) The paper exit sensor is turned ON, and detects the leading edge of the sheet.
- 15) The timing sensor is turned OFF, and the trailing edge of the sheet is detected.
- 16) When the trailing edge of the sheet leaves the vertical transport rollers, the paper feed motor stops.  
(When there is a next sheet to be inserted, the paper feed motor reverses to take it in.)

### [Paper exit]

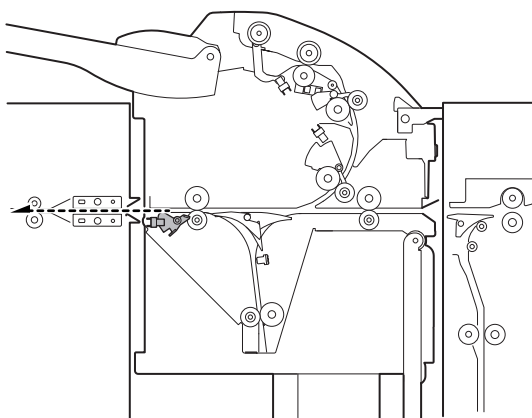

- 17) The paper exit sensor is turned OFF, and the trailing edge of the sheet is detected.
- 18) When there is no next sheet to be inserted, the transport motor stops.

NOTE: While the transport motor (horizontal transport rollers 1 and horizontal transport rollers 2) rotates at a speed specified by the main unit in the online mode, it rotates at either of the speeds shown below in the offline mode.

#### \* Transport speed in offline mode


Small-sized sheet (of which length detected in the tray is 216 mm or less): 627 mm/sec

Large-sized sheet (of which length detected in the tray is more than 276 mm): 800 mm/sec




## C. Reverse paper feeding operation of inserter

### [Paper loading]

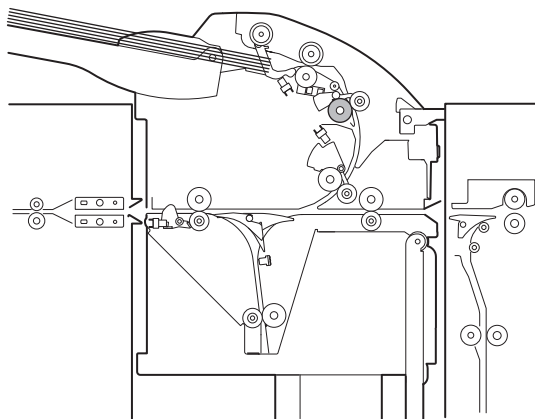


- 1) A sheet is placed in the paper feed tray of the inserter.
- 2) The START LED lights up in blue on the operator panel of the inserter.
- 3) The inserter reserves an operation command sent by the main unit.
- 4) The registration clutch is turned ON to lock the registration rollers.

### [Separation]

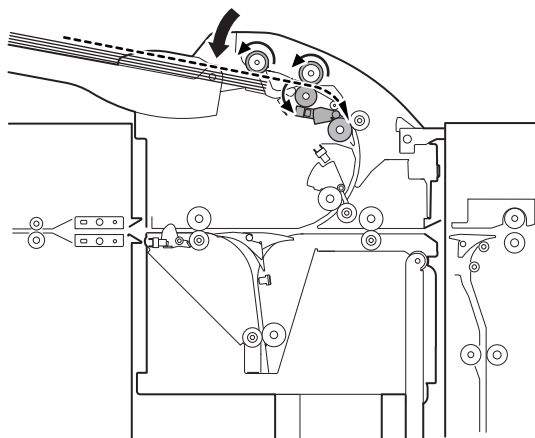


- 5) The paper feed motor reverses to lower the pickup roller, thereby taking in the sheet from the paper feed tray
- 6) The registration sensor detects the leading edge of the sheet.
- 7) The sheet makes contact with the registration rollers to form a loop, thereby stopping the paper feed motor.
- 8) The registration clutch is turned OFF.

### [Leading-edge registration]

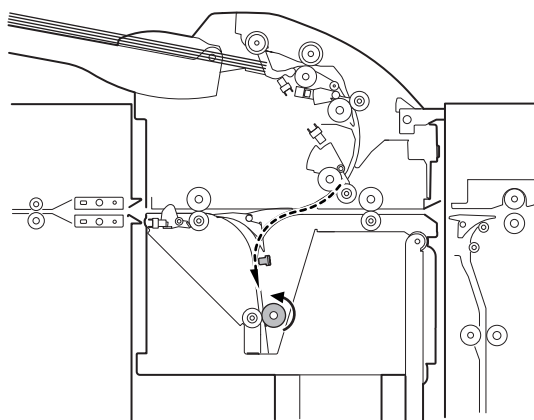


- 9) The paper feed motor starts to rotate in the forward direction. The registration rollers and vertical transport rollers rotate. If the sheet is the first sheet, the flapper solenoid in the reverse section is turned ON at this point of time.
- 10) The timing sensor detects the leading edge of the sheet.
- 11) The leading edge of the sheet passes between the vertical transport rollers
- 12) When sheet transport needs to be suspended for adjusting the space between sheets, the paper feed motor stops to stop the sheet.

### [Entering reverse section]

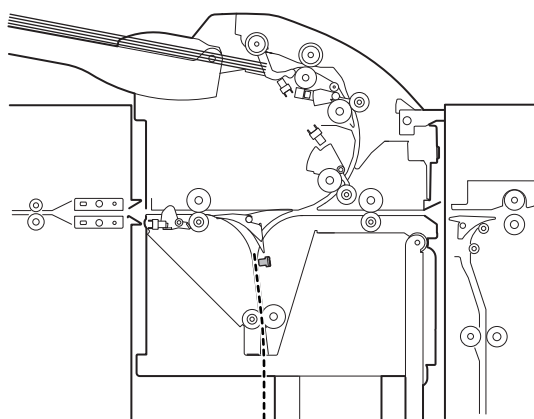


- 13) When a predetermined waiting time period has passed, the flapper solenoid is turned ON, the paper feed motor restarts, and the reverse motor starts to rotate in the forward direction.
- 14) The reverse sensor is turned ON, and detects the leading edge of the sheet.
- 15) When the trailing edge of the sheet leaves the timing sensor, the paper feed motor starts to slow down to stop.  
(After the paper feed motor has completely stopped, if there is a next sheet to be inserted, the paper feed motor starts to reverse to take it in.)

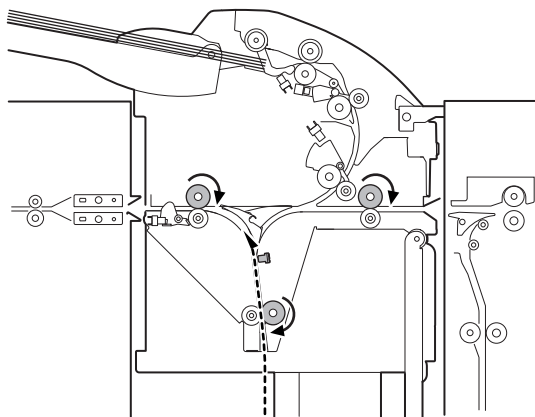


- 16) The reverse sensor is turned OFF. The trailing edge of the sheet is detected, and the flapper solenoid in the reverse section is turned OFF. When the sheet travels a predetermined distance, the reverse motor stops.

#### [Exiting from reverse section]

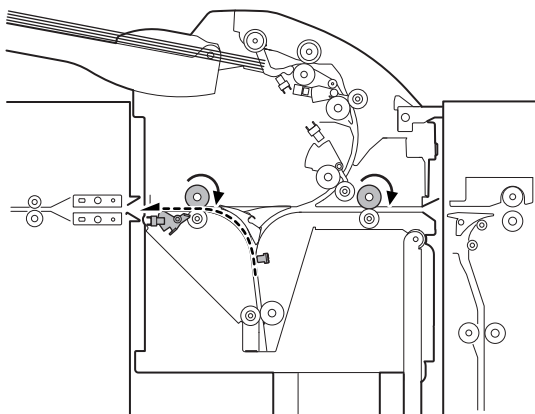


- 17) When the reverse motor has completely stopped, the reverse motor starts to reverse, and the transport motor starts.  
18) The reverse sensor is turned ON, and detects the leading edge of the sheet.

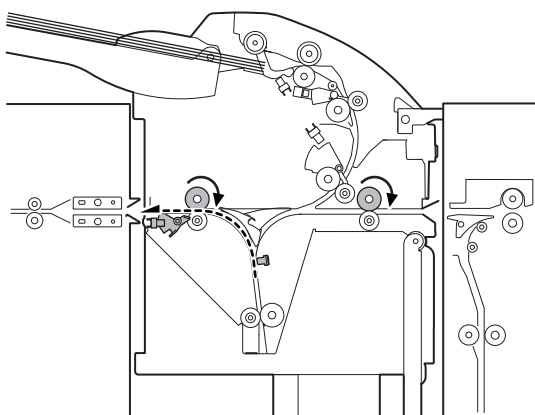

- 19) The paper exit sensor is turned ON, and detects the leading edge of the sheet.  
20) The reverse sensor is turned OFF. When the sheet travels a predetermined distance after its trailing edge is detected, the reverse motor stops.  
(If the next sheet waits at the leading-edge registration position, the flapper solenoid in the reverse section is turned ON, the paper feed motor starts to rotate in the forward direction, and the reverse motor starts to rotate in the forward direction.)

#### [Paper exit]

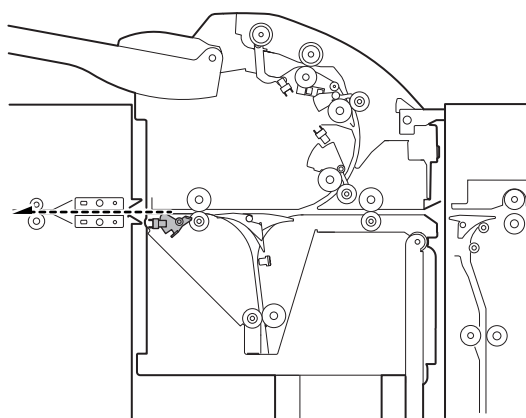


- 21) The paper exit sensor is turned OFF, and the trailing edge of the sheet is detected.  
22) If there is no next sheet to be inserted, the transport motor stops.

## 4. Offline mode setting

### A. How to set punching mode

The figure below shows the operator panel.

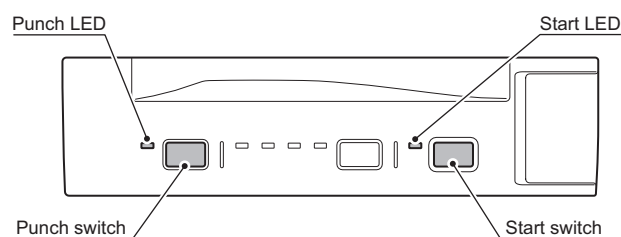

Setting procedure:


- 1) Place a sheet in the tray.
- 2) Press the PUNCH switch on the operator panel.
- 3) The PUNCH LED lights up to indicate that setting has been completed.
- 4) Press the START switch to start operation.

Canceling procedure:

- 5) Press the PUNCH switch on the operator panel.
- 6) The PUNCH LED goes out to indicate that setting has been canceled.

NOTE: If you cannot make or cancel setting by following the respective procedures above, refer to "5. LED indication on operation panel" shown later. When no LEDs are lit, check the setting made by the main unit and the inserter status.

### B. How to set stapling mode

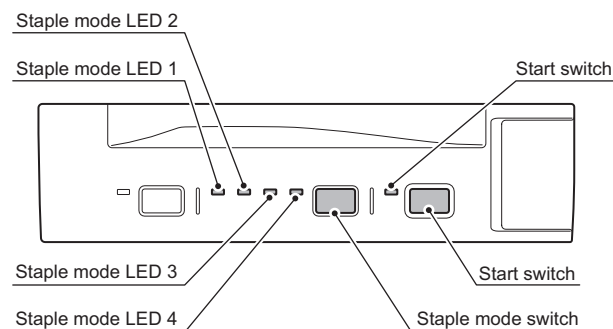

Setting procedure:

- 1) Place a sheet in the tray.
- 2) Press the STAPLE MODE switch on the operator panel.
- 3) Each time you press the switch, the STAPLE MODE LEDs light up by turns in the following order: 1, 2, 3, 4 All LEDs OFF 1 ... (When the saddle mode is cannot be used, the order is: 1 2, 3, All LEDs OFF 1 ...)
- 4) When the desired LED lights up, press the START switch to start operation.

(Refer to the correspondence between the stapling modes and LEDs shown later.)

The correspondence between the punching/stapling mode settings and LEDs is shown below.

Punch LED	Staple mode LEDs				Stapling mode
	LED1	LED2	LED3	LED4	
○	●	○	○	○	1-point stapling at back
○	○	●	○	○	2-point stapling
○	○	○	●	○	1-point stapling at front
○	○	○	○	●	Saddle stapling (saddle stitching)
●	○	○	○	○	Punching
●	●	○	○	○	Punching + 1-point stapling at back
●	○	●	○	○	Punching + 2-point stapling
●	○	○	●	○	Punching + 1-point stapling at front

\* ●: means "Lit."

Canceling procedure:

- 5) Press the STAPLE MODE switch on the operator panel.
- 6) All the STAPLE MODE LEDs go out to indicate that setting has been canceled.

NOTE: If you cannot make or cancel setting by following the respective procedures above, refer to "5. LED indication on operation panel" shown later. When no LEDs are lit, check the setting made by the main unit and the inserter status.

NOTE: The punching mode and saddle mode cannot be used at the same time.

## 5. LED indication on operator panel

Status	Cause	Explanation	START LED		MODE LED
			Red	Green	
Empty tray					The selected MODE LED is lit.
	Inserter problem				
	Finisher problem				
	Paper jam in inserter		Lit		The LED of the selected mode is lit.
	Paper jam in finisher		Lit		The LED of the selected mode is lit.
	Inserter alarm				The LED of the selected mode is lit.
	Finisher alarm				The LED of the selected mode is lit.
	Open inserter cover				The LED of the selected mode is lit.
	Open finisher cover				The LED of the selected mode is lit.
	Offline operation disabled				
	Insert tray specified stapling mode non-usable Punching non-usable				The LED of the selected mode is lit.
	Operation mode Stapling disabled Punching disabled				The LED of the selected mode is blinking.
	Full tray (considered as a kind of finisher alarms)				The LED of the selected mode is lit.
	Other				
Paper-loaded tray (Operable)				Lit	The LED of the selected mode is lit.
Paper-loaded tray (Non-operable)	Insert tray specified stapling mode non-usable Punching non-usable		Lit		
	Insert tray specified stapling mode non-usable Punching non-usable		Lit		The LED of the selected mode is lit.
	Insert tray specified stapling mode non-usable Punching non-usable		Lit		
	Insert tray specified stapling mode non-usable Punching non-usable		Lit		The LED of the selected mode is lit.
	Insert tray specified stapling mode non-usable Punching non-usable		Blinking		The LED of the selected mode is lit.
	Insert tray specified stapling mode non-usable Punching non-usable		Blinking		The LED of the selected mode is blinking.
Paper-loaded tray (Non-operable)	Open inserter cover				The LED of the selected mode is lit.
	Open finisher cover				The LED of the selected mode is lit.
	Incompatible paper size	A non-usable paper size "A4 lateral," etc. is added when the saddle mode is selected: Extra size	Blinking		The LED of the selected mode is lit.
	Offline operation disabled				
	Insert tray specified stapling mode non-usable Punching non-usable	The selected mode is non-usable.			The LED of the selected mode is blinking.
	Operation mode Stapling disabled Punching disabled	The selected mode is disabled.			The LED of the selected mode is blinking.
	Full tray (considered as a kind of finisher alarms)	The tray corresponding to the selected mode is full.	Blinking		The LED of the selected mode is blinking.
	Over loaded		Blinking		The LED of the selected mode is blinking.
	Paper loaded in the finisher intermediate process tray		Blinking		The LED of the selected mode is lit.
	Other	Main unit status "operation disabled," finisher status "non-operable," etc.			The LED of the selected mode is lit.
Waiting for start of offline operation		After a user presses the START switch		Blinking	The LED of the selected mode is lit.
In offline operation				Blinking	The LED of the selected mode is lit.

NOTE: For LED status, each blank means "not lit."

## 6. Paper jam/error detection

### A. List of Paper jams

Description	Detection timing	Explanation
Not arrived at registration sensor	At a time of separating a sheet	A paper jam is detected if the registration sensor is not turned ON, which means absence of a sheet, even when the paper feed motor has been driven for a fixed distance after the pickup roller starts to lower.
Not arrived at timing sensor	At a time of leading-edge registration	A paper jam is detected if the timing sensor is not turned ON, which means absence of a sheet, even when the registration rollers (paper feed motor) have been driven for a fixed distance after they are started.
Not arrived at paper exit sensor	At a time of paper exit in through mode	A paper jam is detected if the paper exit sensor is not turned ON by the leading edge of a sheet, which means absence of a sheet, even when the transport motor has been driven for a fixed distance after the main unit sends a paper exit command.
	At a time of paper exit in normal paper feed mode	A paper jam is detected if the paper exit sensor is not turned ON, which means absence of a sheet, even when the leading edge of a sheet has traveled a fixed distance after it reaches the paper exit rollers (horizontal transport rollers 2).
	At a time of paper exit in reverse paper feed mode	A paper jam is detected if the paper exit sensor is not turned ON, which means absence of a sheet, even when a sheet has been transported a fixed distance by the transport motor after the reverse sensor is turned ON, which means presence of a sheet.
Not arrived at reverse sensor	At a time of entering reverse section	A paper jam is detected if the reverse sensor is not turned ON, which means absence of a sheet, even when the reverse motor has been driven for a fixed distance after leading-edge registration.
	At a time of exiting from reverse section	A paper jam is detected if the reverse sensor is turned ON, which means absence of a sheet, even when the reverse motor has been driven for a fixed distance while a sheet is exiting from the reverse section.
Stay at registration sensor	At a time of paper exit in normal paper feed mode	A paper jam is detected if the registration sensor is not turned OFF, which means presence of a sheet, even when the paper feed motor has been driven for a predetermined amount after a sheet reaches the starting position of leading-edge registration.
	At a time of entering reverse section in reverse paper feed mode	
Stay at timing sensor	At a time of paper exit in normal paper feed mode	A paper jam is detected if the timing sensor is not turned OFF, which means presence of a sheet, even when the paper feed motor has been driven for a fixed distance after the registration sensor is turned OFF, which means absence of a sheet.
	At a time of entering reverse section in reverse paper feed mode	
Stay at paper exit sensor	At a time of paper exit in through mode	A paper jam is detected if the paper exit sensor is not turned OFF, which means presence of a sheet, even when the transport motor has been driven for a predetermined amount after the paper exit sensor is turned ON, which means presence of a sheet.
	At a time of paper exit in normal paper feed mode	A paper jam is detected if the paper exit sensor is not turned OFF, which means presence of a sheet, even when the transport motor has been driven for a fixed distance after the trailing edge of a sheet reaches the paper exit rollers (horizontal transport rollers 2).
	At a time of paper exit in reverse paper feed mode	
Stay at reverse sensor	At a time of entering reverse section	A paper jam is detected if the reverse sensor is not turned OFF, which means presence of a sheet, even when the reverse motor has been driven for a fixed distance after the timing sensor is turned OFF, which means absence of a sheet.
	At a time of exiting from reverse section	A paper jam is detected if the reverse sensor is not turned OFF, which means presence of a sheet, even when the reverse motor has been driven for a predetermined amount after the reverse sensor is turned ON, which means presence of a sheet.

### B. Error detection

#### (1) EEPROM errors

Explanation:

- 1) Timeout error  
The EEPROM is being programmed even after a predetermined time period (150 msec) has passed.
- 2) Writing error  
The written data does not match the read data even when writing and reading are retried.
- 3) Reading error  
Checking pieces of data read from three sources results in mismatch even when checking is retried.

#### (2) Reverse sensor adjustment error

Explanation:

- 1) When the DA output exceeds the upper limit  
Even when the DA output is increased, the AD input value does not fall within the appropriated range.
- 2) When the DA output is less than the lower limit  
Even when the DA output is decreased, the AD input value does not fall within the appropriated range.

### C. Alarm detection

Explanation:

An alarm is issued because the size of a sheet in the tray cannot be correctly detected when both the sub tray pullout detection sensor and the sub tray retraction detection sensor are turned OFF.

Indication:


Shown by a LED on the operator panel of the inserter or of the main unit as an inserter alarm.

## [6] DISASSEMBLY AND ASSEMBLY


### 1. Paper feed separation unit

#### A. Pickup roller & paper feed roller


- 1) Open the top cover.

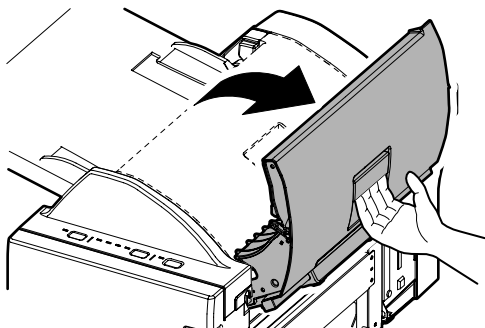

- 2) Remove the cover A.

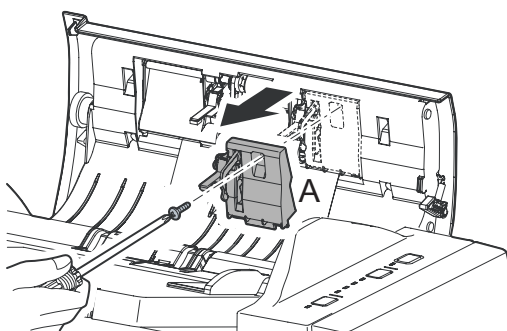


- 3) Turning the unit A, remove the roller guide B.

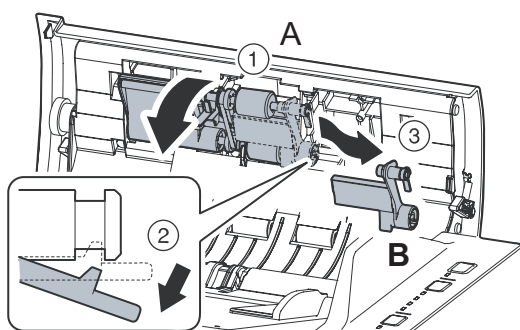


- 4) Remove the pickup roller and paper feed roller.

A: Pickup roller  
B: Paper feed roller

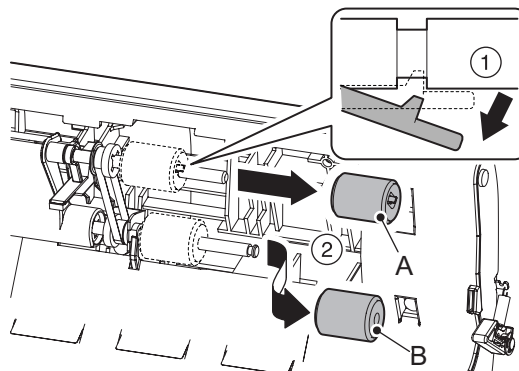


#### B. Torque limiter & separation roller

- 1) Open the top cover.
- 2) Remove the cover A.

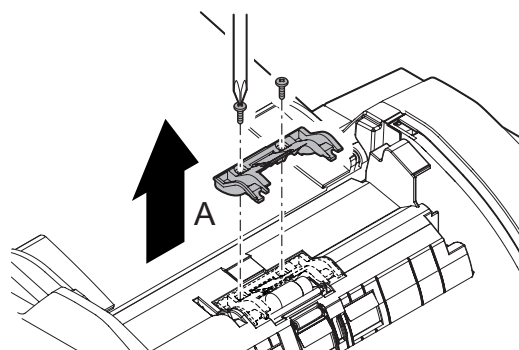


- 3) Turn the unit A to remove.

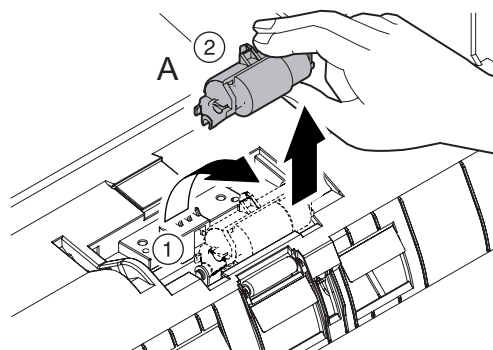

- 4) Remove the torque limiter and the separation roller.

A: Horizontal pass roller 2  
B: Timing roller

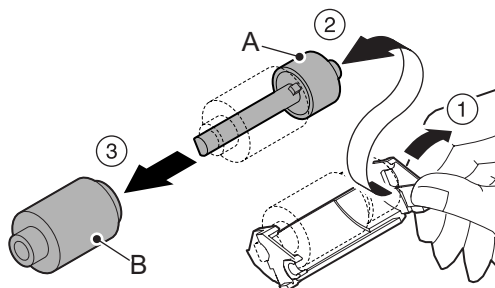


## 2. Paper feed unit


### A. Horizontal pass roller 1 and registration roller

Paragraph in Sub Section.


- 1) Open the top cover.
- 2) Open the mount cover.

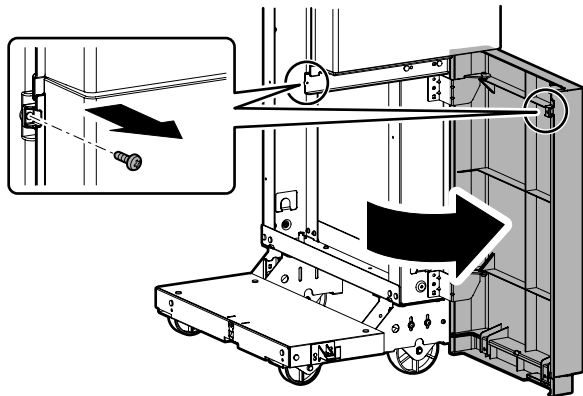


- 3) Remove the front cover.

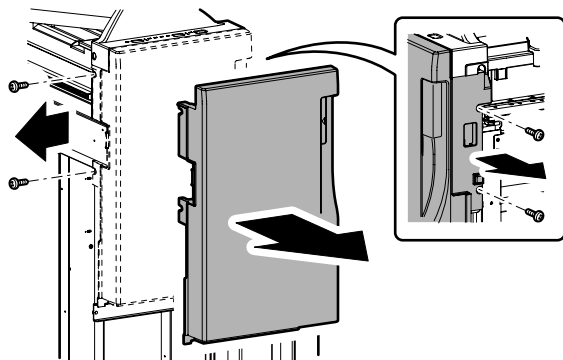

- 4) Remove the rear cover.

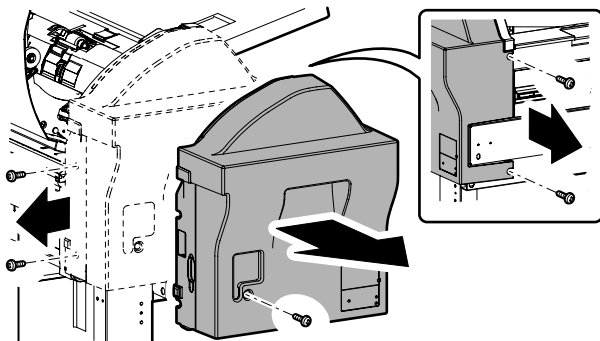


- 5) Remove the top cover.

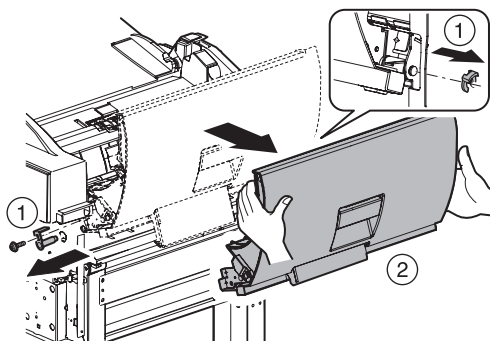


A: Horizontal pass roller 1

B: Registration roller

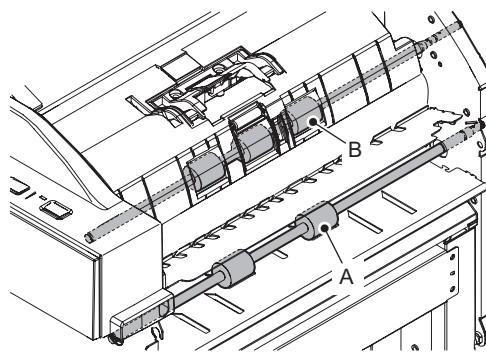


### B. Horizontal pass roller 2 and timing roller


- 1) Open the top cover.
- 2) Remove the front cover and rear cover.
- 3) Remove the operating unit.

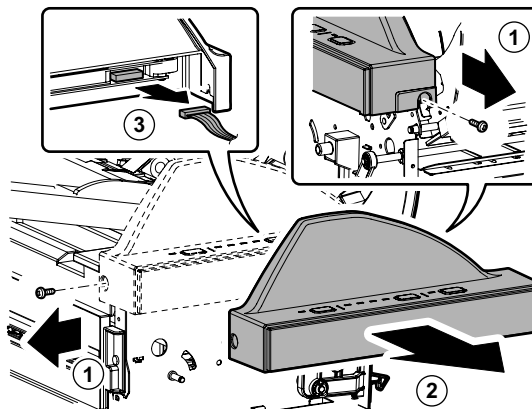


- 4) Remove the cover A.

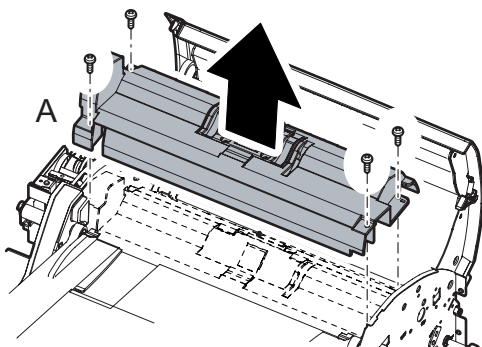


- 5) Remove the tray unit.

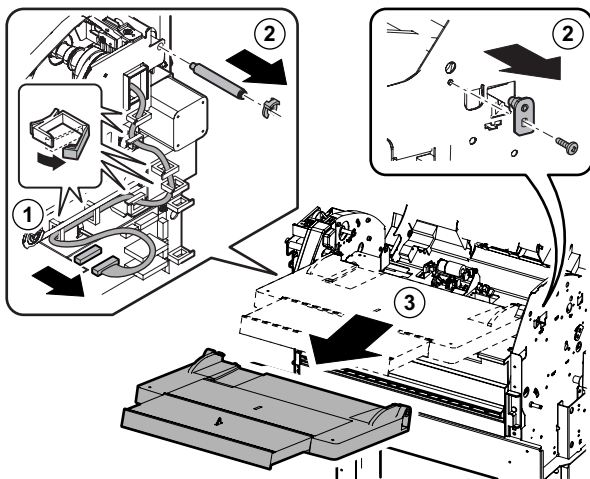

- 6) Remove the cover A.

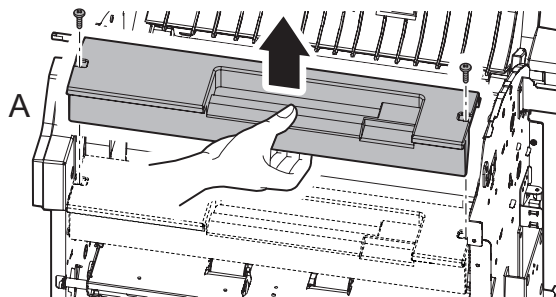


A: Horizontal pass roller 2  
B: Timing roller

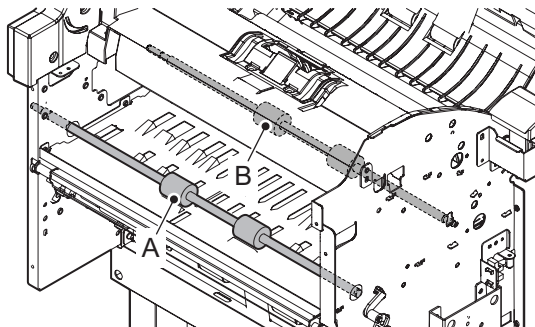


## C. Reverse roller and reverse sensor


- 1) Open the top cover.
- 2) Remove the front cover and rear cover.
- 3) Remove the guide A to remove the stay B.

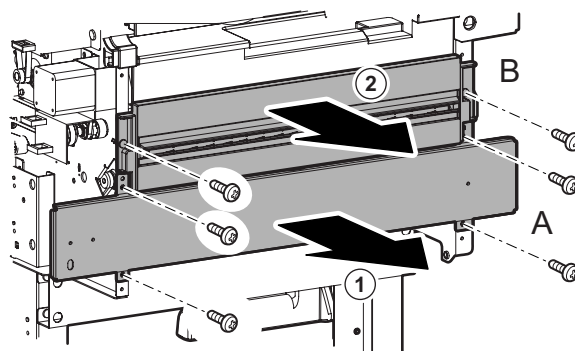


- 4) Remove the reverse unit.

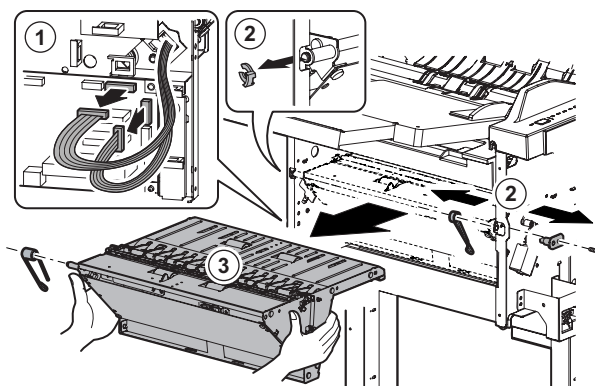

- 5) Remove the cover A.

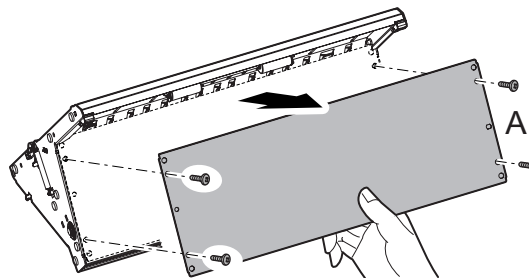


A: Reverse sensor  
B: Reverse roller

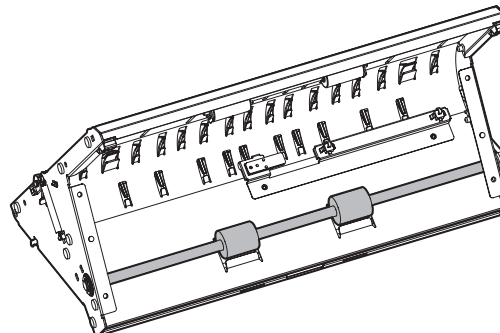




## D. Paper guide

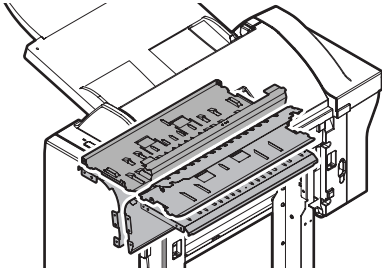

## 3. Drive unit



### A. Belts

- 1) Open the top cover.
- 2) Remove the rear cover.

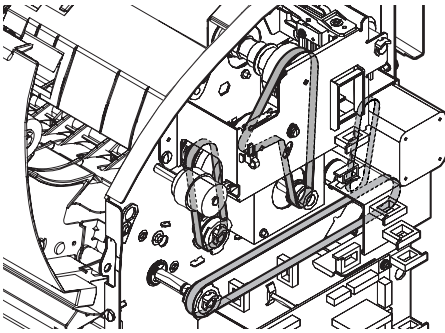

### B. Gears


- 1) Open the top cover.
- 2) Remove the rear cover.
- 3) Remove the drive unit.

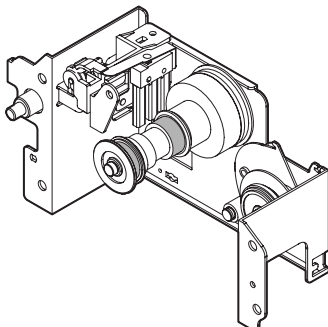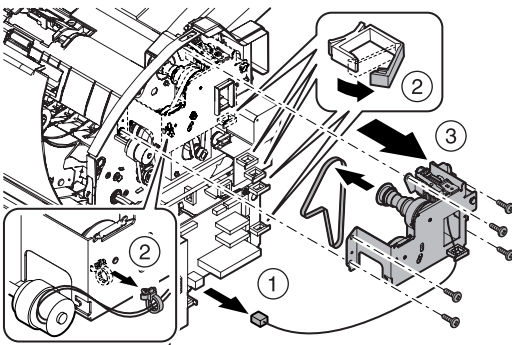

## 4. PWB


### A. Operation panel PWB

- 1) Remove the front cover.
- 2) Remove the operating unit.
- 3) Remove the operation panel PWB.

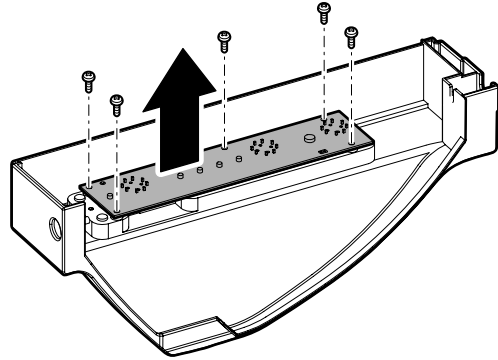

### B. Main control PWB


- 1) Remove the rear cover.
- 2) Remove the main control PWB.

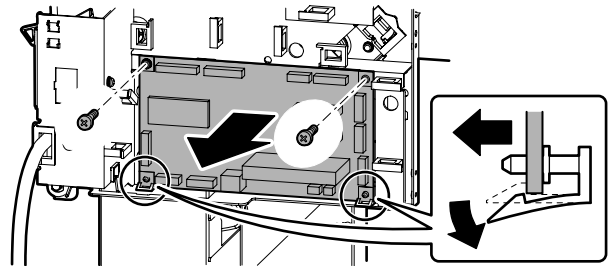

## 5. Motor


### A. Paper feed motor

- 1) Remove the rear cover.
- 2) Remove the drive unit.
- 3) Remove the paper feed motor.

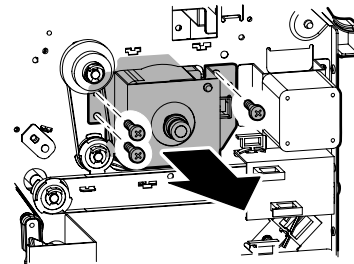


## B. Transport motor

- 1) Remove the rear cover.
- 2) Remove the transport motor.

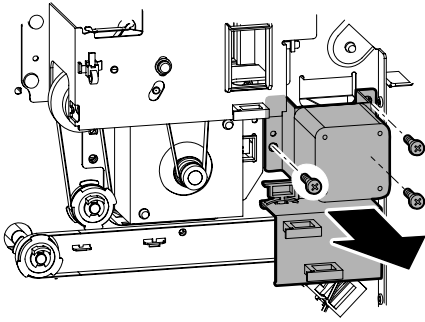


## C. Reverse motor

- 1) Remove the front cover and rear cover.
- 2) Remove the reverse unit.
- 3) Remove the cover A.

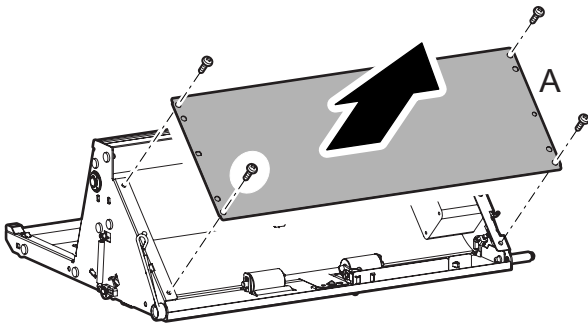


- 4) Remove the reverse motor.

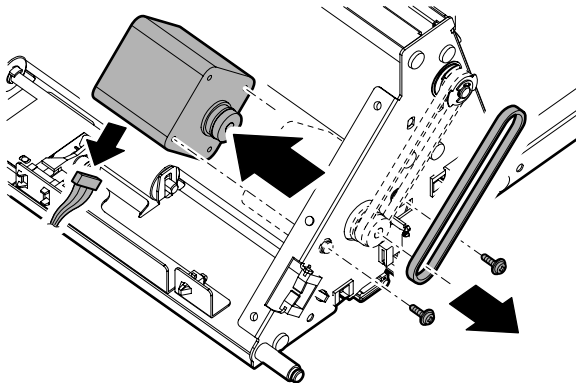


## 6. Other parts

### A. Sensors

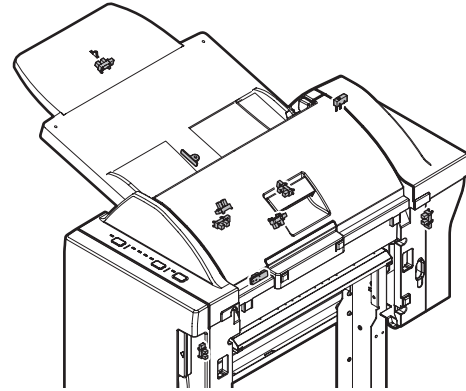


### B. Tray sensor

- 1) Open the top cover.
- 2) Remove the front cover and rear cover.
- 3) Remove the operating unit.
- 4) Remove the tray unit.
- 5) Disassemble the tray.

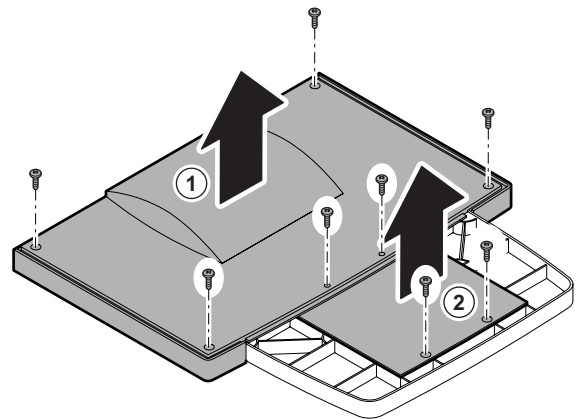

- 6) Remove the tray sensor.

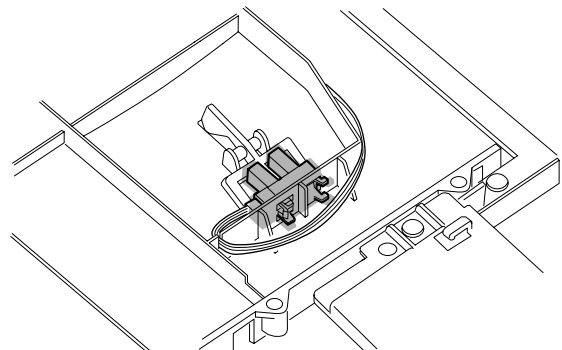


### C. Registration sensor and empty sensor

- 1) Open the top cover.
- 2) Remove the front cover and rear cover.
- 3) Detach the top cover.
- 4) Remove the registration sensor and the empty sensor.


A: Empty sensor

B: Registration sensor

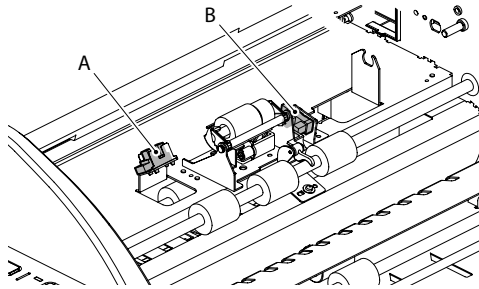


### F. Paper exit sensor

- 1) Remove the front cover and rear cover.
- 2) Remove the reverse unit.
- 3) Remove the cover. (See the step 3 of 5-C.)
- 4) Remove the paper exit sensor.

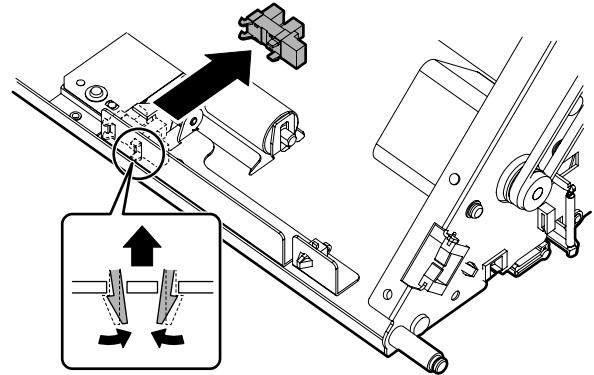


### G. Flapper solenoid

- 1) Remove the rear cover.
- 2) Remove the flapper solenoid.

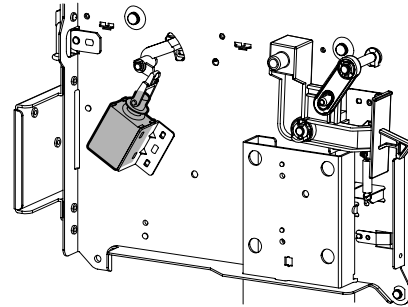


### D. Set sensor

- 1) Open the rear cover.
- 2) Remove the set sensor

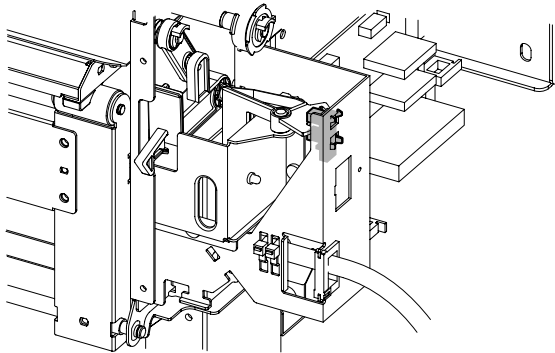

### E. Reverse unit open/close sensor


- 1) Remove the front cover.
- 2) Remove the reverse unit open/close sensor.

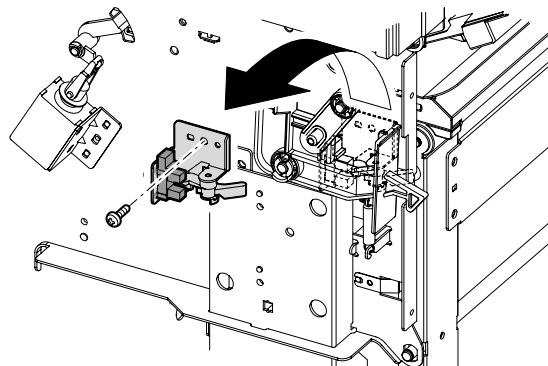

## 7. Note on assembly

### A. Reverse flapper solenoid adjustment

- 1) Rotate the solenoid lever (LVR-FM-SOL) fully clockwise.
- 2) Adjust the position of the bracket (BKT-FM-SOL) of the solenoid so that the solenoid's arm is completely retracted (that there is no clearance in the rubber spacer, the stopper E-ring, and the main unit of the solenoid). When adjusted, fix the bracket with screws.

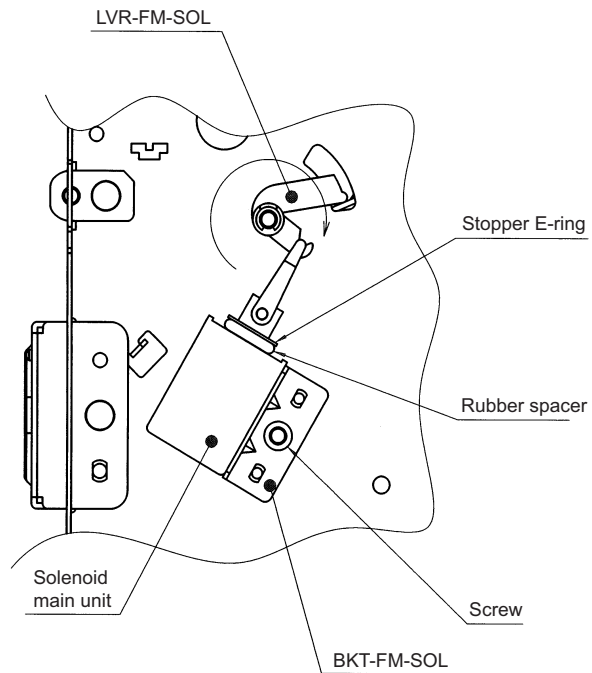

## [7] MAINTENANCE



### 1. Maintenance list

X: Checking (clean, replace or adjust as required) ○: Cleaning ▲: Replace △: Adjust ☆: Lubricate □: Position shift

No.	Parts name	When calling	300K	600K	900K	1200K	1500K	1800K	2100K	2400K	2700K	3000K	Remarks
1	Pickup rollers/ paper feed rollers	×	○	○	○	○	○	○	○	○	○	○	(Note 1)
2	Torque limiter	×	×	×	×	×	×	×	×	×	×	×	(Note 2)
3	Transport rollers	×	○	○	○	○	○	○	○	○	○	○	
4	Transport paper guides	×	○	○	○	○	○	○	○	○	○	○	
5	Gears	×	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	Lubricate necessary parts (Specified positions)
6	Belts		×	×	×	×	×	×	×	×	×	×	
7	Sensors	×	×	×	×	×	×	×	×	×	×	×	
8	Discharge brush	×	×	×	×	×	×	×	×	×	×	×	


Note 1 : Replacement reference: For replacement, refer to each paper feed port counter value: 150 K or 1 year after the start of use

Note 2 : Replacement reference: For replacement, refer to each paper feed port counter value: 400 K

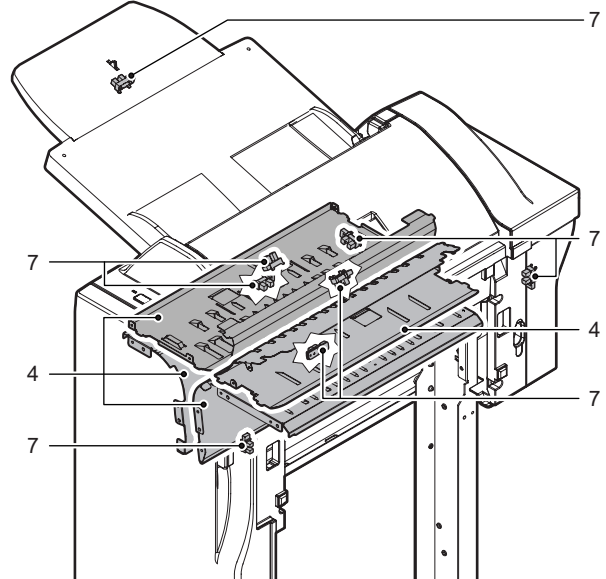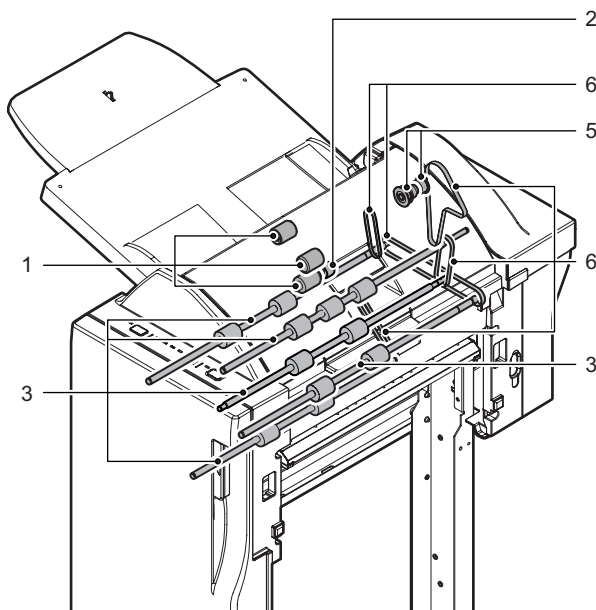

## [8] ADJUSTMENTS

### 1. Paper width detection level setting (adjustment)

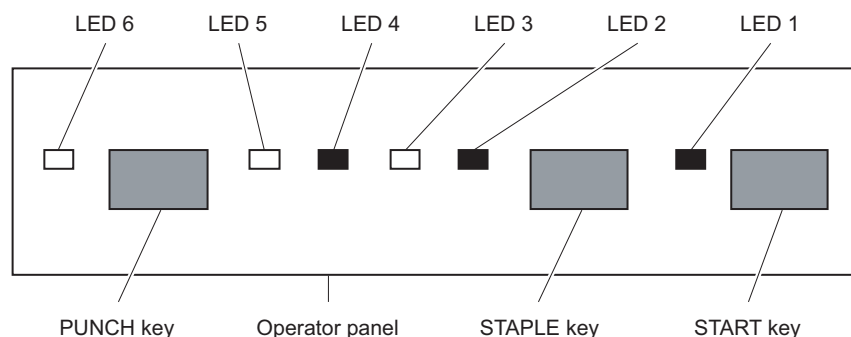

- 1) Enter the diag mode.  
Press and hold PUNCH key and START key, and turn on the power of the main unit.  
The LCD display of the main unit turns on and off, then turns on again.  
Check that LED1 is flashing, and release PUNCH key and START key.
- 2) Press START key.  
The display changes to the diag mode.
- 3) Press PUNCH key and STAPLE key to set to the paper width detection level setting (adjustment) mode.  
The diag mode is displayed by combination of LED lighting.
- 4) Press START key. (The selected diag mode is executed.)
- 5) Check that LED2 is flashing, and set the paper guide to the max. width position.
- 6) Press START key.
- 7) Check that LED3 is flashing, and set the paper guide to A4R width position.
- 8) Press START key.
- 9) Check that LED4 is flashing, and set the paper guide to A5R width position.
- 10) Press START key.
- 11) Check that LED5 is flashing, and set the paper guide to the min. width position.
- 12) Press START key.

■ : Lighting □ : OFF

Diag mode No.	Diag mode	LED lighting
11	Paper width detection level setting (adjustment) mode	<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">6</div> <div style="text-align: center;">5</div> <div style="text-align: center;">4</div> <div style="text-align: center;">3</div> <div style="text-align: center;">2</div> <div style="text-align: center;">1</div> </div> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="border: 1px solid black; width: 15px; height: 15px;"></div> <div style="border: 1px solid black; width: 15px; height: 15px;"></div> <div style="background-color: black; width: 15px; height: 15px;"></div> <div style="border: 1px solid black; width: 15px; height: 15px;"></div> <div style="background-color: black; width: 15px; height: 15px;"></div> <div style="background-color: black; width: 15px; height: 15px;"></div> </div>

When setting (adjustment) is completed normally, LED1 lights up.  
When it is failed, LED1 flashes more rapidly.

## [9] SIMULATION

### 1. List

Code		Function (purpose)	Purpose	Section
Main	Sub			
3	30	Used to check the operations of the sensors and detectors in the inserter and the control circuits.	Operation test/Check	Inserter
	31	Used to check the operations of the loads in the inserter and the control circuit.	Operation test/Check	Inserter
	32	Used to set the adjustment value of the inserter paper width detection level.	Setting (Adjustment)	Inserter

### 2. Details of trouble code

3

3-30	
<b>Purpose</b>	Operation test/Check
<b>Function (Purpose)</b>	Used to check the operations of the sensors and detectors in the inserter and the control circuits.

<b>Section</b>	Inserter
<b>Operation/Procedure</b>	

The operating conditions of the sensors and detectors are displayed.

Sensors and detectors which are turned on are highlighted.

TH_SEN	Inserter sub tray pull-out detection
TS_SEN	Inserter sub tray storage detection
T_SEN	Inserter tray paper length detection
EMP_SEN	Inserter tray empty detection
REG_SEN	Inserter resist detection
TIM_SEN	Inserter timing detection
JCK_SEN	Inserter JAM cover open/close detection
H_SEN	Inserter reverse detection
HI_SEN	Inserter paper exit detection
HYK_SEN	Inserter reverse unit open/close detection
P_ST_SW	Inserter start SW
P_MO_SW	Inserter staple mode select SW
P_PN_SW	Inserter punch select SW
SET_SW	Inserter set SW

TEST SIMULATION NO.03-30				CLOSE
FIN SENSOR CHECK				
TH_SEN	TS_SEN	T_SEN	EMP_SEN	
REG_SEN	TIM_SEN	JCK_SEN	H_SEN	
HI_SEN	HYK_SEN	P_ST_SW	P_MO_SW	
P_PN_SW	SET_SW			
				1/1

3-31	
<b>Purpose</b>	Operation test/Check
<b>Function (Purpose)</b>	Used to check the operations of the loads in the inserter and the control circuit.
<b>Section</b>	Inserter

**Operation/Procedure**

- 1) Select a target of the operation check with the touch panel.
- 2) Press [EXECUTE] key.

The selected load is operated.

When [EXECUTE] is pressed, the operation is stopped.

K_MOT	Inserter paper feed motor
Y_MOT	Inserter horizontal transport motor
H_MOT	Inserter reverse motor
F_SOL	Inserter flapper solenoid
R_CL	Inserter resist clutch
P_LED	Inserter operation panel upper LED

TEST SIMULATION NO.03-31		CLOSE
INSERTER LOAD CHECK		
K_MOT	Y_MOT	
H_MOT	F_SOL	
R_CL	P_LED	
		EXECUTE 1/1

3-32

<b>Purpose</b>	Setting (Adjustment)
<b>Function (Purpose)</b>	Used to set the adjustment value of the inserter paper width detection level.
<b>Section</b>	Inserter

**Operation/Procedure**

- 1) Select an item corresponding to the adjustment content with [↑] and [↓] keys on the touch panel.
- 2) Enter the adjustment value with 10-key.
- 3) Press [OK] key. (The set value is saved.)

Item	Display	Item	Set range
A	MAX. POSITION	Inserter tray width detection adjustment value (Max. width)	0 - 1023
B	POSITION 1	Inserter tray width detection adjustment value (Adjustment position 1)	0 - 1023
C	POSITION 2	Inserter tray width detection adjustment value (Adjustment position 2)	0 - 1023
D	MIN. POSITION	Inserter tray width detection adjustment value (Min. width)	0 - 1023

TEST

SIMULATION NO.03-32

CLOSE

INserter TRAY VALUE SETTING

A: 72

[ 0~1023]

A: 72 ; MAX. POSITION

B: 200 ; POSITION1

C: 10 ; POSITION2

D: 100 ; MIN. POSITION

↑

↓

OK



# **[10] SELF DIAG MESSAGE AND TROUBLE CODE**

Problem		The inserter does not perform at all when the main switch of the main unit is turned ON.	
Case1	Cause	Loose contact with the main unit	
	Check and remedy	Check that each connector is firmly connected.	
Case2	Cause	Loose contact of the connector terminal of the wire (interface harness) connecting with the main unit	
	Check and remedy	Check continuity in between the connector terminals. Replace the connection wire if no continuity is measured	
Case3	Cause	JAM cover open/close switch fault	
	Check and remedy	Check continuity between the switch contacts. Replace the contacts if no continuity is measured.	
Case4	Cause	Controller PCB fault	
	Check and remedy	Check that 24 V DC and 5 V DC are supplied from the main unit after the above cases 1 to 3 are confirmed. If 24 V and 5 V are not present at CN1-2 pin and IC5-32 pin on the PCB, replace the controller PCB.	

Problem		The paper feed motor does not operate. The reverse motor does not operate. The horizontal transport motor does not operate.	
Case1	Cause	Loose contact of the motor connector terminal	
	Check and remedy	Check continuity of the connector contacts.(CN1 to 3)	
Case2	Cause	Disconnection of the motor coil	
	Check and remedy	Check continuity between the connector terminals. Replace the connection wire if no continuity is measured.	
Case3	Cause	Controller PCB fault	
	Check and remedy	If the motor does not operate in the motor single operation mode, replace the controller PCB.	

Problem		The paper is delivered without being reversed in the reverse paper feed mode.	
Case1	Cause	Connector terminal fault of the reverse solenoid	
	Check and remedy	Check continuity of the connector contact.(CN4)	
Case2	Cause	Disconnection of the solenoid coil	
	Check and remedy	Inspect the coil for continuity. Replace the coil if no continuity is measured.	
Case3	Cause	Controller PCB fault	
	Check and remedy	If the solenoid does not perform in the solenoid single operation mode, replace the controller PCB.	

Problem		Paper jam is displayed on the system display.	
Case1	Cause	Paper jam	
	Check and remedy	Visual observation. Take out paper jams.	
Case2	Cause	Reverse sensor fault	
	Check and remedy	Measure a voltage of TP2 on the controller PCB and check that 3 to 3.6 V is observed when no paper is stacked, and that 1.5 V or less is observed when paper is stacked. Replace the sensor if the measured voltage exceeds these ranges.	
Case3	Cause	Paper exit sensor fault	
	Check and remedy	Measure a voltage of TP7 on the controller PCB and check that 5 V is observed when no paper is stacked, and that 1 V or less is observed when paper is stacked. Replace the sensor if the measured voltage exceeds these ranges.	
Case4	Cause	Empty sensor fault	
	Check and remedy	Measure a voltage of TP4 on the controller PCB and check that 1 V or less is observed when no paper is stacked, and that 5 V is observed when paper is stacked. Replace the sensor if the measured voltage exceeds these ranges.	
Case5	Cause	Registration sensor fault	
	Check and remedy	Measure a voltage of TP5 on the controller PCB and check that 5 V is observed when no paper is stacked, and that 1 V or less is observed when paper is stacked. Replace the sensor if the measured voltage exceeds these ranges.	
Case6	Cause	Timing sensor fault	
	Check and remedy	Measure a voltage of TP6 on the controller PCB and check that a 5 V is observed when no paper is stacked, and that 1 V or less is observed when paper is stacked. Replace the sensor if the measured voltage exceeds these ranges.	
Case7	Cause	Controller PCB fault	
	Check and remedy	If the problem is not solved with the sensors whose level changes when each is turned ON/OFF, replace the controller PCB.	

Problem		The machine does not detect the paper.	
Case1	Cause	Tray sensor fault	
	Check and remedy	Measure a voltage of TP13 on the controller PCB and check that 5 V is observed when no paper is stacked, and that 1 V or less is observed when paper is stacked. Replace the sensor if the measured voltage exceeds these ranges.	
Case2	Cause	Controller PCB fault	
	Check and remedy	If the problem is not solved with a change in the sensor level after the above case 1 is confirmed, replace the controller PCB.	

Problem		The machine does not detect the paper.	
	Case1	Cause	JAM cover open/close switch fault
		Check and remedy	Check continuity between the switch contacts. Replace the switch if no conduction is measured.
	Case2	Cause	Reverse unit open/close sensor fault
		Check and remedy	Measure a voltage of TP9 on the controller PCB and check that 1 V or less is observed when the reverse unit is open, and that 5 V is observed when the reverse unit is closed. Replace the sensor if the measured voltage exceeds these ranges.
	Case3	Cause	Controller PCB fault
		Check and remedy	If the problem is not solved by a change in the sensor level after the above cases 1 to 3 are confirmed, replace the controller PCB.


Problem		Inserter unset is displayed on the system display.	
	Case1	Cause	Set sensor fault
		Check and remedy	Measure a voltage of TP16 on the controller PCB and check that 5 V is observed when the inserter is set, and that 1 V or less is observed when the inserter is not set. Replace the sensor if the measured voltage exceeds these ranges.
	Case2	Cause	Controller PCB fault
		Check and remedy	If the problem is not solved by a change in the sensor level after the above case 1 is confirmed, replace the controller PCB.

Problem		The registration clutch does not perform.	
	Case1	Cause	Loose contact of the clutch connector terminal
		Check and remedy	Check continuity of the connector contacts. (CN4)
	Case2	Cause	Disconnection of the clutch coils
		Check and remedy	Inspect the coils for continuity. Replace the coils if no continuity is measured.
	Case3	Cause	Controller PCB fault
		Check and remedy	If the clutch does not perform in the clutch single operation mode, replace the controller PCB.


[illegible]

# [11] ELECTRICAL SECTION

## 1. Actual wiring chart

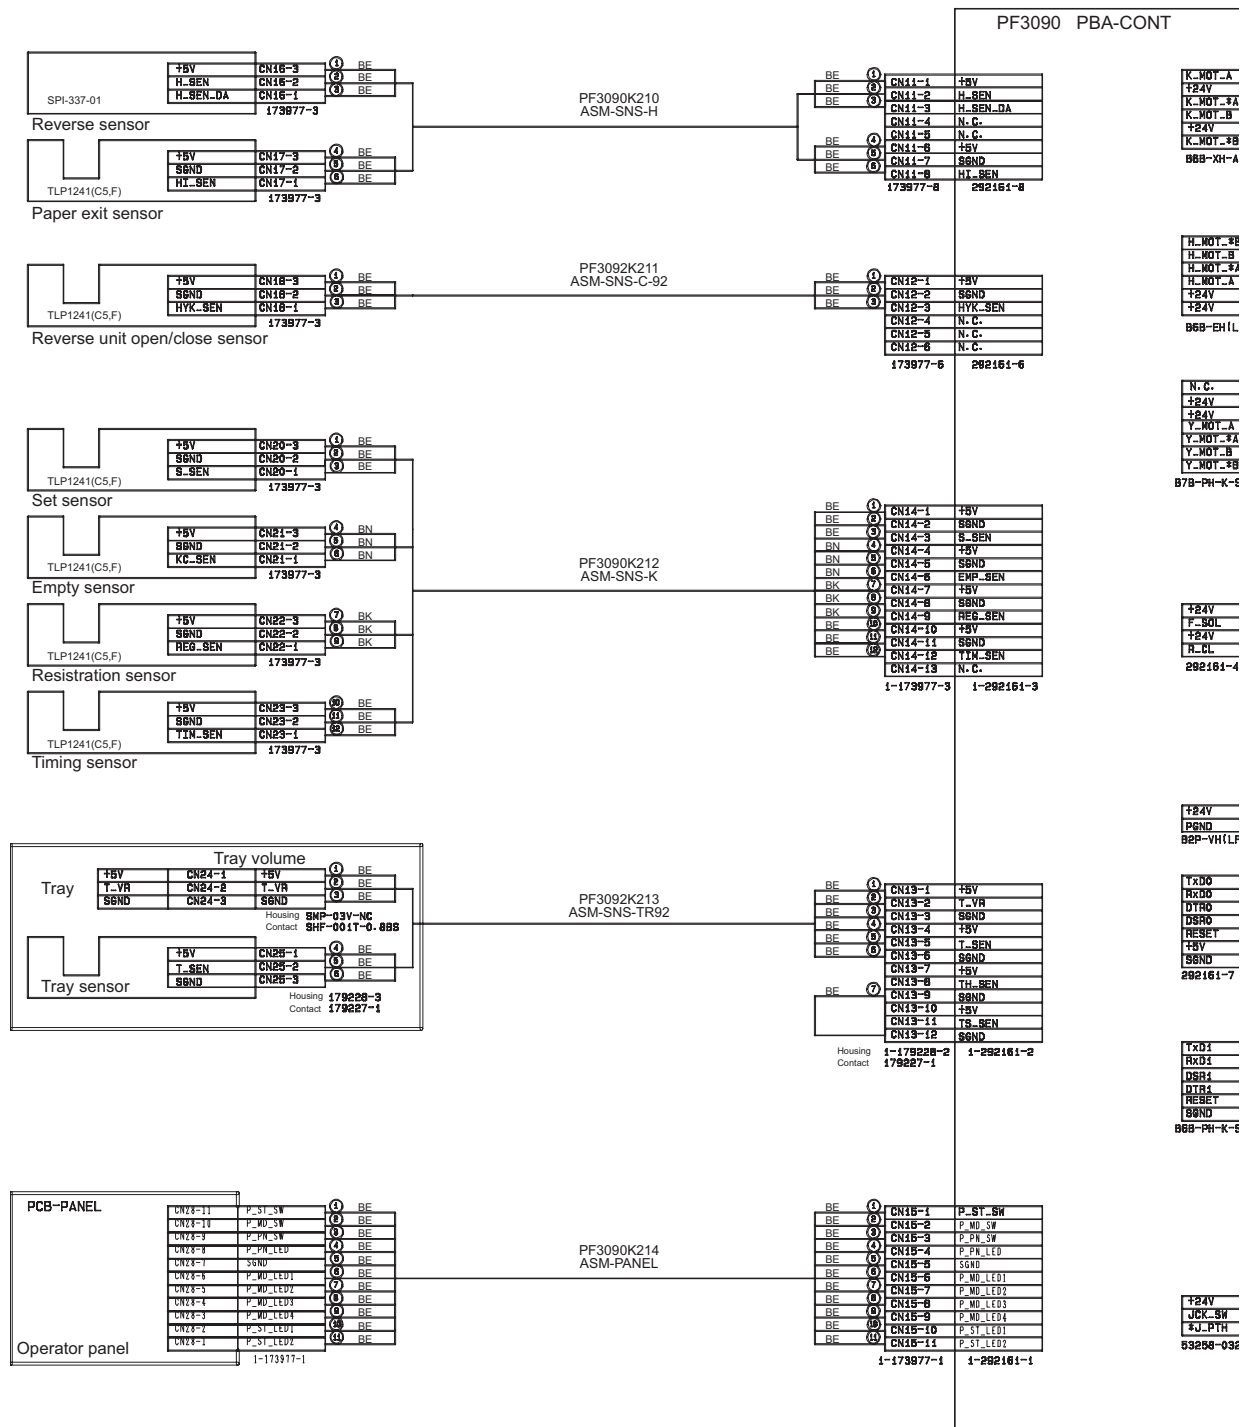

# 390 PBA-CONT

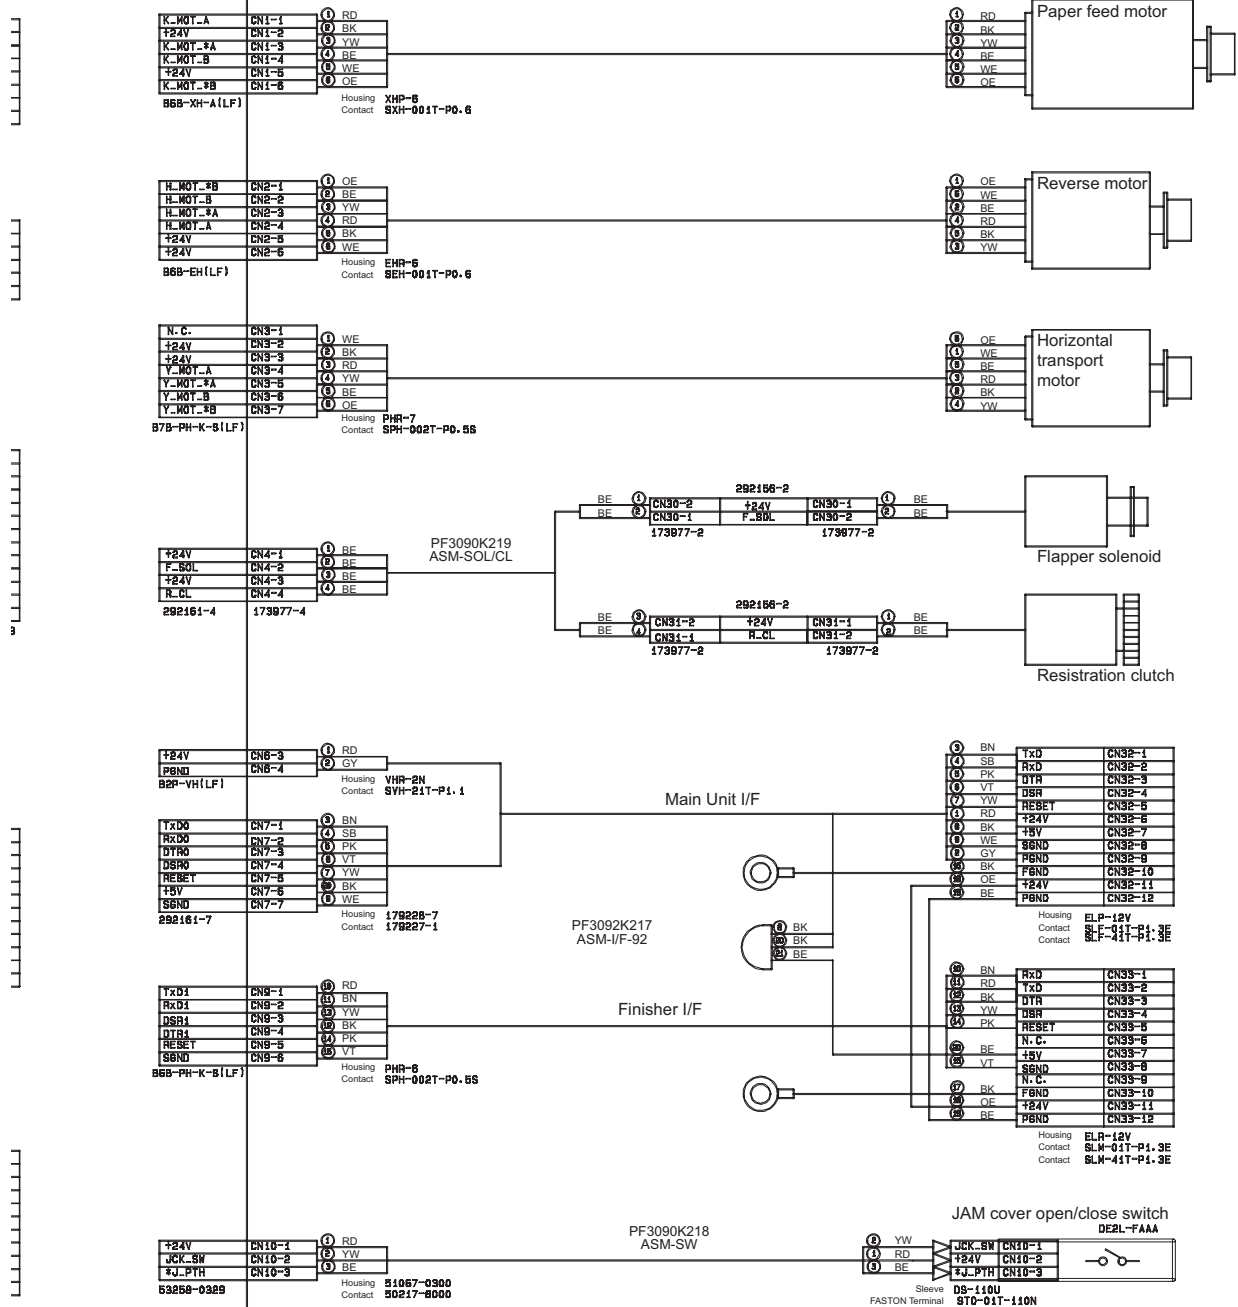


## 2. Circuit description

### A. Outline

This circuit controls paper feed, transport, reverse, and delivery.


This circuit consists of the following divisions: managing signals from the sensors, the switches, and the main unit; driving the motors, the solenoid, and the clutch; the CPU and associated circuits.

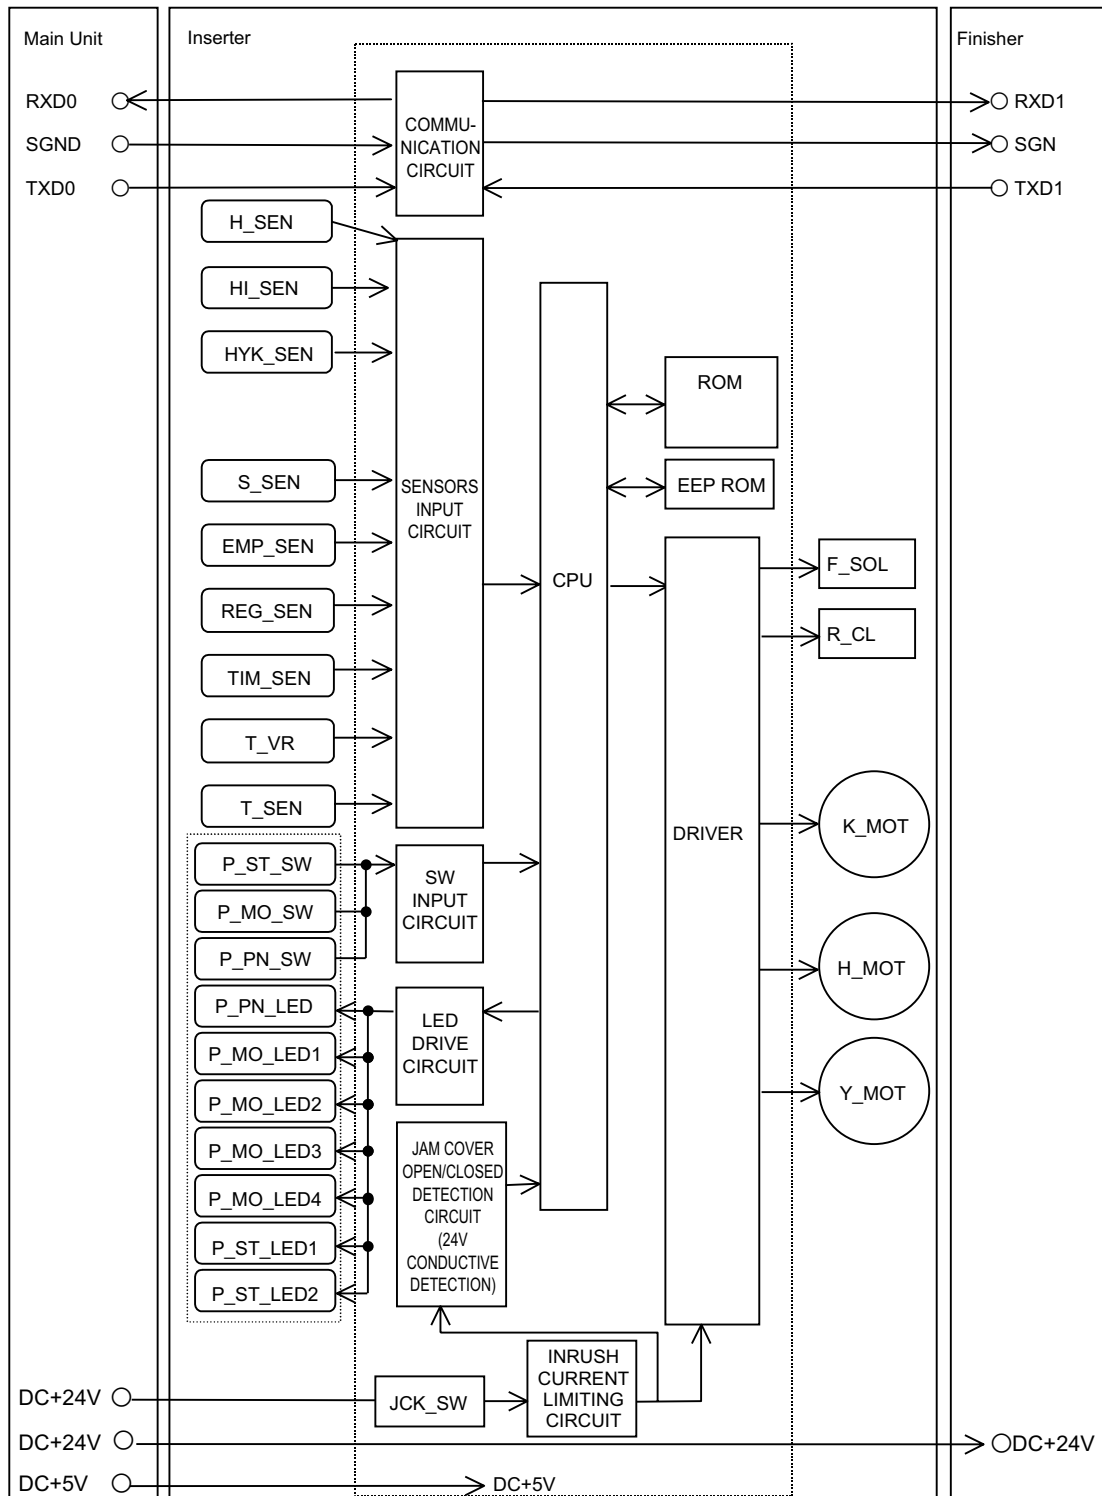


## B. Circuit Detail

### (1) Communication Circuit

#### 1) Tx/D signal

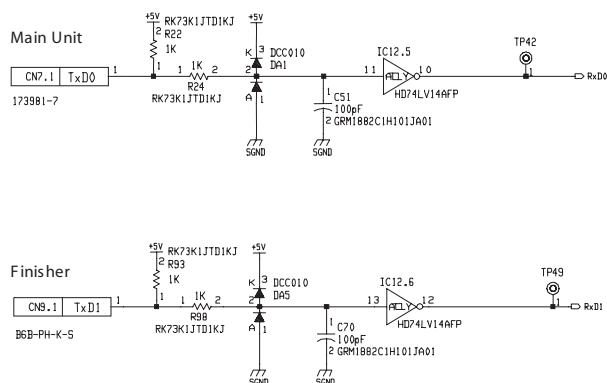

#### 2) Rx/D signal

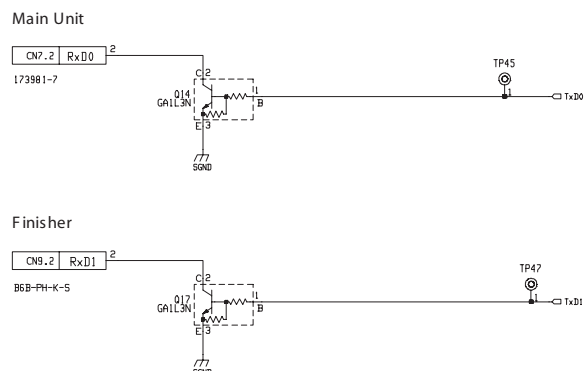


This circuit communicates with the main unit and the finisher.

TxD0 and TxD1 are data signals transmitted from the main unit and the finisher to the inserter. Rx/D0 and Rx/D1 are data signals transmitted from the inserter to the main unit and the finisher. Logical 1 is represented by +5V, and logical 0 is represented by 0V.

### (2) Sensor Input Circuits

#### 1) Reverse Sensor (H\_SEN)

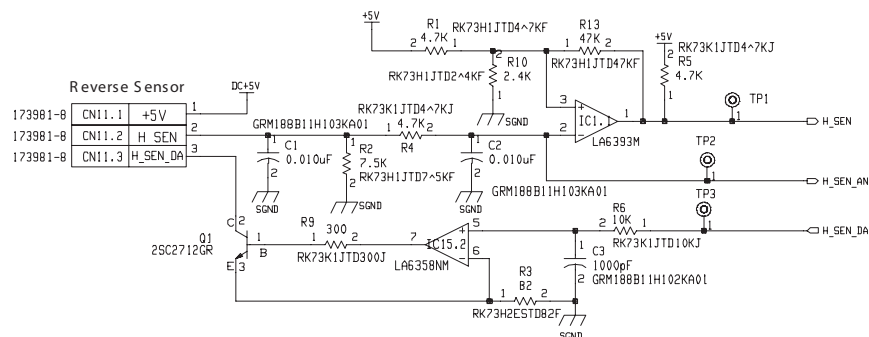

H\_SEN uses the reflective sensor integrated with an LED and a phototransistor.

The sensor detects a sheet between the sensor and the opposite reflector interrupting the light path.


The CPU (IC6-Pin94, 95, 96) output is transmitted to the sensor to light the LED through the D/A converter (IC13), the operational amplifier (IC15.2), and the transistor (Q1). Meanwhile the signal is transmitted to the CPU (IC6-Pin30) through the noise filters (R4, C2) and the comparator (IC1.1).

The signal input to the CPU follows the logic: "H" when a sheet is detected, "L" when not detected.

The analog signal is transmitted to CPU (IC-Pin105) through no comparator.

R1 and R10 divide the +5V voltage which is applied to the comparator as the reference voltage.

R13 is used to make the reference voltage have hysteresis.

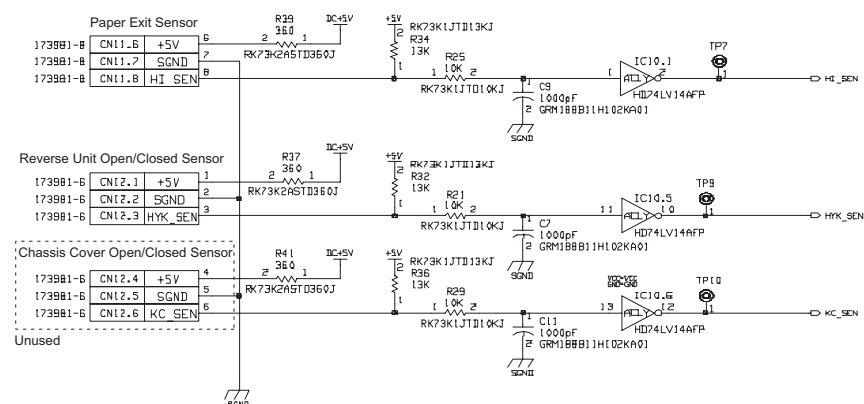

#### 2) Paper Exit Sensor (HI\_SEN)

HI\_SEN uses the photointerrupter integrated with an LED and a phototransistor.

The sensor detects a sheet with the lever actuator interrupting the light path of the photointerrupter.

The signal is transmitted to the CPU (IC6-Pin106) through the noise filters (R25,C9).

The signal input to the CPU follow the logic: "L" when a sheet is detected, "H" when not detected.

R39 is a current limiting resistor for the LED. R34 is a load resistor for the sensor.

### 3) Reverse Unit Open/Closed Sensor (HYK\_SEN)


HYK\_SEN uses the photointerrupter integrated with an LED and a phototransistor.

The sensor detects state of the reverse unit with the lever actuator interrupting the light path of the photointerrupter.

The signal is transmitted to the CPU (IC6-Pin108) through the noise filters (R21,C7).

The signal input to the CPU follows the logic: "L" when the reverse unit is open, "H" when closed.

R37 is a current limiting resistor for the LED. R32 is a load resistor for the sensor.

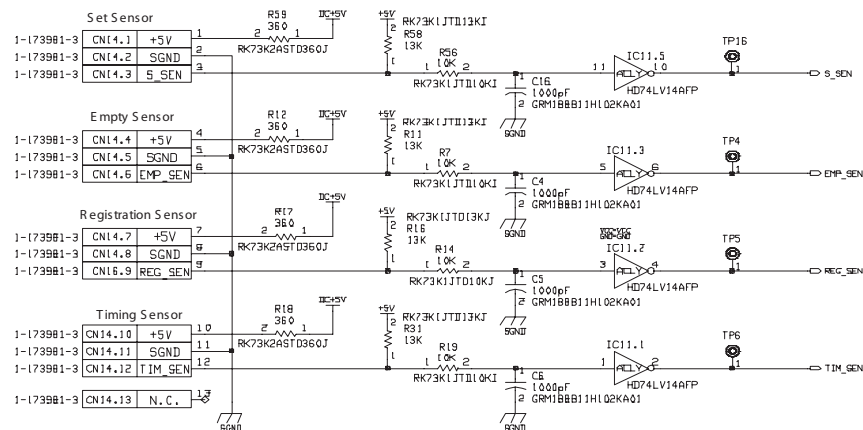

### 4) Set Sensor (S\_SEN)

S\_SEN uses the photointerrupter integrated with an LED and a phototransistor.

The sensor detects the main unit with the lever actuator interrupting the light path.

The signal is transmitted to the CPU (IC6-Pin2) through the noise filters (R56,C16).

The signal input to the CPU follows the logic: "H" when the inserter is connected to the main unit, "L" when not connected.

R59 is a current limiting resistor for the LED. R58 is a load resistor for the sensor.

### 5) Empty Sensor (EMP\_SEN)

EMP\_SEN uses the photointerrupter including the LED and the phototransistor in one unit.

The sensor detects a sheet with the lever actuator interrupting the light path.

The signal is transmitted to the CPU (IC6-Pin31) through the noise filters (R7,C4).

The signal input to the CPU is the following logic: the signal is "H" when a sheet is detected, "L" when not detected.

R12 is the current limiting resistor for the LED. R11 is the load resistor for the sensor.

### 6) Registration Sensor (REG\_SEN)

REG\_SEN uses the photointerrupter integrated with an LED and a phototransistor.

The sensor detects a sheet with the lever actuator interrupting the light path.

The signal is transmitted to the CPU (IC6-Pin32) through the noise filters (R14,C5).

The signal input to the CPU follows the logic: "L" when a sheet is detected, "H" when not detected.

R17 is a current limiting resistor for the LED. R16 is a load resistor for the sensor.

### 7) Timing Sensor (TIM\_SEN)


TIM\_SEN uses the photointerrupter integrated with an LED and a phototransistor.

The sensor detects a sheet with the lever actuator interrupting the light path.

The signal is transmitted to the CPU (IC6-Pin33) through the noise filters (R19,C6).

The signal input to the CPU follows the logic: "L" when a sheet is detected, "H" when not detected.

R18 is a current limiting resistor for the LED. R31 is a load resistor for the sensor.

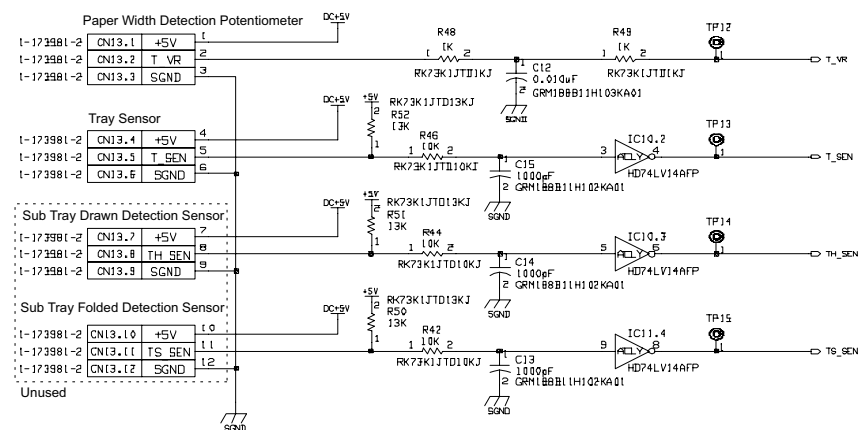

### 8) Paper Width Detection Potentiometer (T\_VR)

T\_VR is a potentiometer.

The paper width is detected using the output voltage, which may vary depending on the potentiometer's knob position.

The signal is transmitted to the CPU (IC6-Pin112) through the noise filters (R48,C12).



### 9) Tray Sensor (T\_SEN)

T\_SEN uses the photointerrupter integrated with an LED and a phototransistor.

The sensor detects a sheet with the lever actuator interrupting the light path.

The signal is transmitted to the CPU (IC6-Pin126) through the noise filters (R46,C15).

The signal input to the CPU follows the logic: "L" when a sheet is detected, "H" when not detected.

R52 is a load resistor for the sensor.

### 10) JAM Cover Open/Closed Switch (JCK\_SW)

JCK\_SW is the JAM cover open/closed detection switch using the microswitch.


+24V is supplied to the switch. The contacts open when the JAM cover is open.

When the switch turns on, +24V voltage is applied to the cathode of ZD2, the base current flows to Q12, and Q12 turns on to transmit the signal to the CPU (IC6-Pin111).

The signal is also used as the +24V conduction signal simultaneously.


The signal input to the CPU follows the logic: "H" when the JAM cover is open, "L" when closed.

The +24V conduction signal follows the logic: "L" when the +24V voltage is conducted.

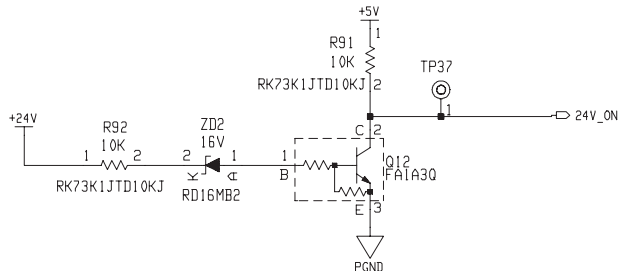

## (3) Motor Drive Circuits

### 1) Paper Feed Motor Drive Circuit (K\_MOT)

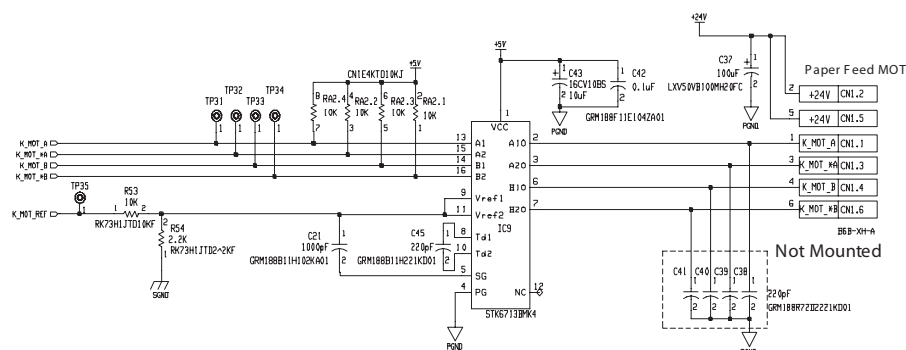


This circuit rotates/stops K\_MOT and controls its rotational direction and the motor current. The circuit consists of the CPU (IC6), the D/A converter (IC13), the constant-current chopper driver IC (IC9), and other elements.

The signals of the stepping-motor drive excitation pattern from the CPU (IC6-Pin37,38,70,71) control the motor rotation speed and rotational direction.

The analog signal from the D/A converter (IC13-Pin11) is divided into the constant voltage by R53 and R54. The divided voltage is applied to IC9-Pin9,11 to set the motor current.

### 2) Reverse Motor Drive Circuit (H\_MOT)

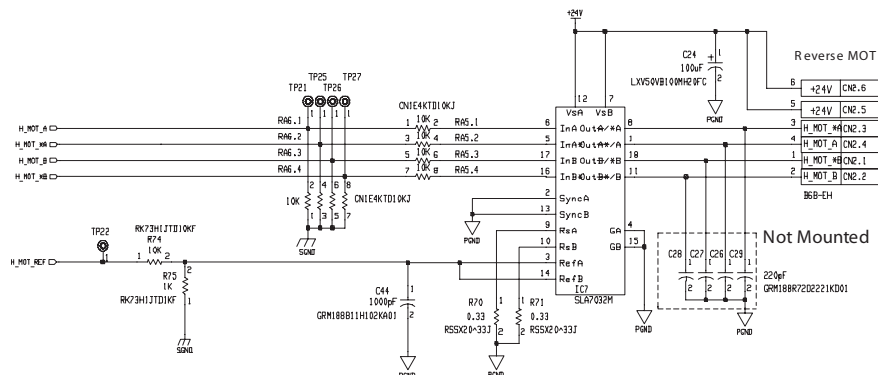


This circuit rotates/stops H\_MOT and controls its rotational direction and the motor current. The circuit consists of the CPU (IC6), the D/A converter (IC13), the constant-current chopper driver IC (IC7), and other elements.

The signals of the stepping-motor drive excitation pattern from the CPU (IC6-Pin118, 120, 121, 122) control the motor rotation speed and rotational direction.

The analog signal from the D/A converter (IC13-Pin5) is divided into the constant voltage by R74 and R75. The divided voltage is applied to IC7-Pin3,14 to set the motor current.

### 3) Transport Motor Drive Circuit (Y\_MOT)

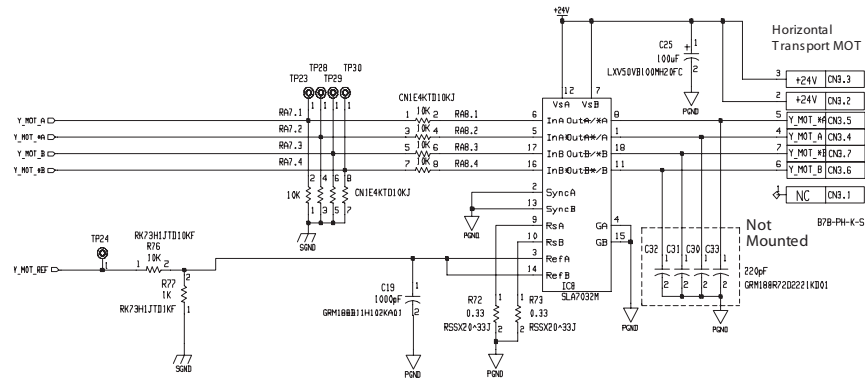


This circuit rotates/stops Y\_MOT and controls its rotational direction and the motor current. The circuit consists of the CPU (IC6), the D/A converter (IC13), the constant-current chopper driver IC (IC8), and other elements.

The signals of the stepping-motor drive excitation pattern from the CPU (IC6-Pin97, 98, 101, 102) control the motor rotation speed and rotational direction.

The analog signal from the D/A converter (IC13-Pin6) is divided into the constant voltage by R76 and R77. The divided voltage is applied to IC8-Pin3,14 to set the motor current.

### 4) Flapper Solenoid and Registration Clutch Drive Circuit (F\_SOL and R\_CL)

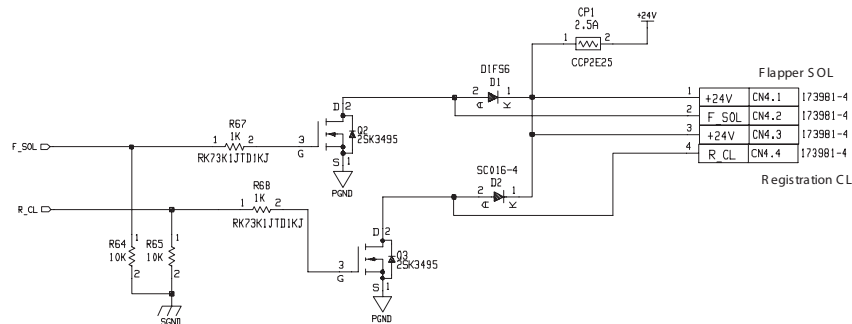


This circuit controls the flapper solenoid operation and the registration clutch engagement.

When the signal F\_SOL is "H", Q2 turns on to activate the solenoid. Similarly, when the signal R\_CL is "H", Q3 turns on to engage the clutch.

The flapper solenoid drive signal is the PWM signal. At the beginning of the solenoid activation, the signal is adjusted to set the solenoid at 100% duty cycle. After the plunger of the solenoid is pulled in, the signal is adjusted to set the solenoid at 70% duty cycle in order to reduce the temperature rise with the plunger hold.

### 5) Reset Circuit

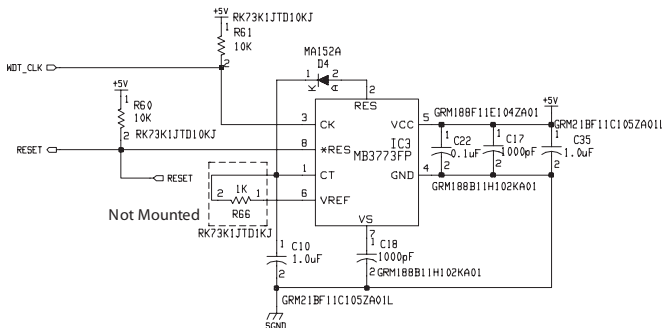


The circuit transmits a reset signal to the CPU when the power is turned on or a power brownout is detected.

The circuit includes a watchdog timer intended to the CPU system operation diagnosis.

After the power is turned on, normally IC3-Pin8 ("RES") is "H". However, when the +5V voltage falls to 4.2V or less because of the power turned off or any trouble, IC3-Pin8 turns "L" to reset the CPU.

The clock signal from the CPU is transmitted to IC3-Pin3 (CK) at a regular interval to clear the watchdog timer embedded in IC3. However, if the clock signal from the CPU disappears because of a system trouble, IC3-Pin8 turns "L" to reset the CPU and stop the system operation.

### 6) EEPROM Circuit

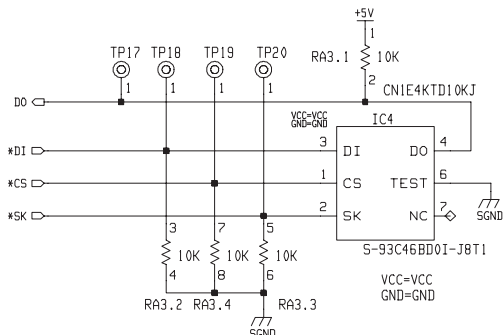

This circuit consists of the data storage EEPROM and the peripheral circuits.


IC4 is a storage memory for the adjustment settings of the reverse sensor (reflective sensor) and the paper width detection potentiometer, and passes the data to the CPU through the four-wire serial interface.

Once data is stored, the data is retained and not cleared even if the power is turned off.

IC4-Pin1 (CS) is the chip selection terminal, and stays "H" during passing data.

IC4-Pin2 (SK) is the serial clock terminal. The serial data is transmitted synchronizing with the clock signal input to the terminal


#### 7) Inrush Current Limiting Circuit

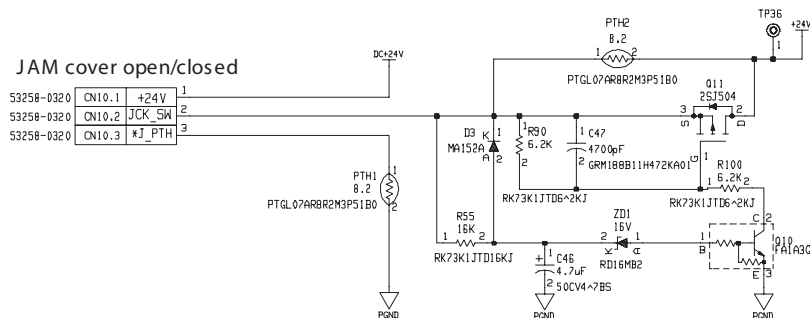

system to a certain value or less. The circuit consists of the PTC thermistor (PTH2) that limits a current and the FET (Q11) that allows a steady current flowing.

When the JAM cover open/closed detection switch is closed, the cathode voltage of ZD1 starts rising to the zener voltage according to the time constant of R55 and C46. During the rise of the cathode voltage, Q11 is off because no base current to Q10 keeps Q10 off, and then a current flows to PTH2 to charge the regeneration capacitor.

#### 8) Operator Panel Drive Circuit

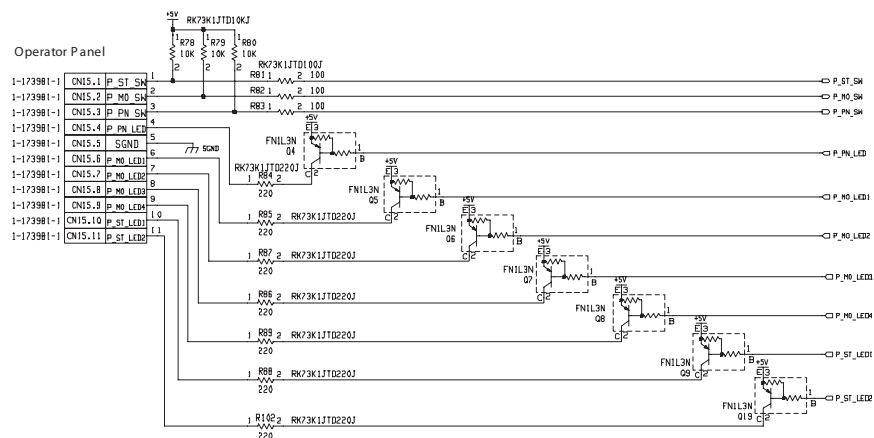

This circuit includes the input circuits of the switches on the operator panel and the drive circuits of the LEDs.

The circuits connected to CN15-Pin1, 2, 3 are the input circuits of the switches on the operator panel. The input signal from the switch goes "L" when the switch is on, "H" when off.

The circuits connected to CN15-Pin4,6-11 are the drive circuits of the LEDs on the operator panel. The LED lights when the signal is "H", does not light when "L".

IC4-Pin3 (DI) is the serial data input terminal. IC4-Pin4 (DO) is the serial data output terminal.

This is the circuit of the operator panel board.

and detects whether each of the PSW1-3 is on or off.



# LEAD-FREE SOLDER

The PWB's of this model employs lead-free solder. The "LF" marks indicated on the PWB's and the Service Manual mean "Lead-Free" solder. The alphabet following the LF mark shows the kind of lead-free solder.

**Example:**

Lead-Free

Solder composition code (Refer to the table at the right.)

5mm

LF

a

<Solder composition code of lead-free solder>

Solder composition	Solder composition code
Sn-Ag-Cu	a
Sn-Ag-Bi Sn-Ag-Bi-Cu	b
Sn-Zn-Bi	z
Sn-In-Ag-Bi	i
Sn-Cu-Ni	n
Sn-Ag-Sb	s
Bi-Sn-Ag-P Bi-Sn-Ag	p

**(1) NOTE FOR THE USE OF LEAD-FREE SOLDER THREAD**

When repairing a lead-free solder PWB, use lead-free solder thread.  
Never use conventional lead solder thread, which may cause a breakdown or an accident.  
Since the melting point of lead-free solder thread is about 40°C higher than that of conventional lead solder thread, the use of the exclusive-use soldering iron is recommendable.

**(2) NOTE FOR SOLDERING WORK**

Since the melting point of lead-free solder is about 220°C, which is about 40°C higher than that of conventional lead solder, and its soldering capacity is inferior to conventional one, it is apt to keep the soldering iron in contact with the PWB for longer time. This may cause land separation or may exceed the heat-resistive temperature of components. Use enough care to separate the soldering iron from the PWB when completion of soldering is confirmed.  
Since lead-free solder includes a greater quantity of tin, the iron tip may corrode easily. Turn ON/OFF the soldering iron power frequently.  
If different-kind solder remains on the soldering iron tip, it is melted together with lead-free solder. To avoid this, clean the soldering iron tip after completion of soldering work.  
If the soldering iron tip is discolored black during soldering work, clean and file the tip with steel wool or a fine filer.

### CAUTION FOR BATTERY REPLACEMENT

(Danish)

ADVARSEL !

Lithiumbatteri – Eksplosionsfare ved fejlagtig håndtering.

Udskiftning må kun ske med batteri

af samme fabrikat og type.

Levér det brugte batteri tilbage til leverandoren.

(English)

Caution !

Danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type

recommended by the manufacturer.

Dispose of used batteries according to manufacturer's instructions.

(Finnish)

VAROITUS

Paristo voi räjähtää, jos se on virheellisesti asennettu.

Vaihda paristo ainoastaan laitevalmistajan suosittelemaan

tyyppiin. Hävitä käytetty paristo valmistajan ohjeiden

mukaisesti.

(French)

ATTENTION

Il y a danger d'explosion s' il y a remplacement incorrect

de la batterie. Remplacer uniquement avec une batterie du

même type ou d'un type équivalent recommandé par

le constructeur.

Mettre au rebut les batteries usagées conformément aux

instructions du fabricant.

(Swedish)

VARNING

Explosionsfara vid felaktigt batteribyte.

Använd samma batterityp eller en ekvivalent

typ som rekommenderas av apparattillverkaren.

Kassera använt batteri enligt fabrikantens

instruktion.

(German)

Achtung

Explosionsgefahr bei Verwendung inkorrektter Batterien.

Als Ersatzbatterien dürfen nur Batterien vom gleichen Typ oder

vom Hersteller empfohlene Batterien verwendet werden.

Entsorgung der gebrauchten Batterien nur nach den vom

Hersteller angegebenen Anweisungen.

\* Applicable to battery-operated equipment

### CAUTION FOR BATTERY DISPOSAL

(For USA, CANADA)

"BATTERY DISPOSAL"

THIS PRODUCT CONTAINS A LITHIUM PRIMARY  
(MANGANESE DIOXIDE) MEMORY BACK-UP BATTERY  
THAT MUST BE DISPOSED OF PROPERLY. REMOVE THE  
BATTERY FROM THE PRODUCT AND CONTACT YOUR  
LOCAL ENVIRONMENTAL AGENCIES FOR INFORMATION  
ON RECYCLING AND DISPOSAL OPTIONS.

"TRAITEMENT DES PILES USAGÉES"

CE PRODUIT CONTIENT UNE PILE DE SAUVEGARDE DE  
MÉMOIRE LITHIUM PRIMAIRE (DIOXYDE DE MANGANESE)  
QUI DOIT ÊTRE TRAITÉE CORRECTEMENT. ENLEVEZ LA  
PILE DU PRODUIT ET PRENEZ CONTACT AVEC VOTRE  
AGENCE ENVIRONNEMENTALE LOCALE POUR DES  
INFORMATIONS SUR LES MÉTHODES DE RECYCLAGE ET  
DE TRAITEMENT.

\* Applicable to battery-operated equipment



**COPYRIGHT © 2006 BY SHARP CORPORATION**

All rights reserved.

Printed in Japan.

No part of this publication may be reproduced,  
stored in a retrieval system, or transmitted,  
in any form or by any means,  
electronic; mechanical; photocopying; recording or otherwise  
without prior written permission of the publisher.

#### **Trademark acknowledgements**

- Microsoft® Windows® operating system is a trademark or copyright of Microsoft Corporation in the U.S.A. and other countries.
- Windows® 95, Windows® 98, Windows® Me, Windows NT® 4.0, Windows® 2000, Windows® XP, Windows® 2000 Server, Windows® Server 2003 and Internet Explorer® are trademarks or copyrights of Microsoft Corporation in the U.S.A. and other countries.
- IBM and PC/AT are trademarks of International Business Machines Corporation.
- Acrobat® Reader Copyright® 1987- 2002 Adobe Systems Incorporated. All rights reserved. Adobe, the Adobe logo, Acrobat, and the Acrobat logo are trademarks of Adobe Systems Incorporated.
- All other trademarks and copyrights are the property of their respective owners.

**SHARP CORPORATION**  
**Digital Document System Group**  
**CS Promotion Center**  
**Yamatokoriyama, Nara 639-1186, Japan**  
2006 June Printed in Japan